

# TX-902/900

Quartz Synthesized Tuner Amplifier
Quarz-Synthesizer-Empfänger-Verstärker
Ampli-tuner à synthétiseur à quartz
Amplificador-sintonizador sintetizado por cuarzo
Quartz-Synthesizer-Tuner-Versterker
Kvarts syntestuner/förstärkare
Amplificatore sintonizzatore sintetizzato al quarzo

THE RESERVE OF THE PERSON OF T	Page
Instruction Manual	14
Bedienungsanleitung	14
Manuel d'instructions	- 26
Manual de instrucciones	39
Gebruiksaanwijzing	51
Bruksanvisning	63
Istruzioni per l'uso	75



- Congratulations on your purchase of the ONKYO TX-902, TX-900 Tuner-Amplifier.
- Please read this manual thoroughly before making connections and turning power on.
- Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new TX-902, TX-900. ● Please retain this manual for future reference.

	— CONTENTS
Features	
Proputions	
Defendations this unit	
Before using this unit	
System connections	
Control positions and names	
Specifications	

### **Features**

- Plenty of Clean Power
  - TX-902: 50 watts of continuous power per channel into 8 ohms with no more than 0.2% total harmonic distortion (2 × 65 watts continuous power at 4 ohms DIN)
  - TX-900: 40 watts of continuous power per channel into 8 ohms with no more than 0.3% total harmonic distortion (2 × 55 watts continuous power at 4 ohms DIN)
- Discrete Output Stage
  - Instead of the less expensive IC power amp circuitry used in some receivers, the TX-902 and TX-900 feature output stages composed of discrete components. Not just an off—the—shelf chip, the circuit design of the output stage is optimized for the specific requirements of the tuner amplifier to assure that the TX-902 and TX-900 can not only deliver sufficient power, but also safely drive even low impedance loads.
- 30-Station FM/AM Random Preset Tuning
- Classified Memory Preset
  - The memory presets are divided into six classes, A through F, which can be used for different types of programs (rock, news, classical, etc.). Or each member of the family can have a separate class (class A for Dad, class B for Mom, class D for Junior). Any preset station can be assigned to any class.
- Direct Access Tuning Using Numeric Buttons
  - Instead of using the UP or DOWN tuning buttons to scan through the available frequencies until the desired station is located, Direct Access Tuning lets you punch in the broadcast frequency directly using the numeric buttons. For example, 103.50 MHz can be selected by simply pressing the 1, 0, 3, 5 and 0 buttons.
- APR (Automatic Precision Reception) System
- Onkyo's exclusive APR system lets every FM broadcast sound its best. Its built in electronic brain monitors the signal and selects the optimum settings for RF local/DX and stereo auto/mono. The APR system settings are shown by indicators on the front panel.
- Six Program Inputs Including Video Sound with Logic Controlled Feather-Touch Keys
- Two Pairs of Speaker Output Terminals
- Loudness Control
- RI Compatible Wireless Remote Control Included (TX-902 only)

### Important safeguards

### "WARNING"

"TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE."

### CAUTION

"TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL."

For models having power cord with a polarized plug.
 CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE
 THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE
 FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### ATTENTION FOR BRITISH MODEL

- Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.
- IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

 This apparatus complies with requirements of EC directive 87/308/EEC.



### Observe the following precautions to obtain troublefree performance for many years.

- 1. Avoid places subject to direct sunlight or extremely high or low
- Avoid damp or dusty places and places directly affected by vibrations from the speakers. In particular, avoid placing the unit on or above one of the speakers.
- Avoid unstable locations and high places from which the unit could fall.
- Ventilation The unit should be situated so that its location or position does not interfere with proper ventilation. For example, the unit should not be placed on a bed, sofa, rug of similar surface that could block the ventilation openings or placed in a built-in installation, such as a bookcase or cabinet, that could impede the flow of air through the ventilation openings.
- Heat The unit should be situated away from heat sources such as radiators, heat registers, or other appliances (including amplifiers) that produce heat. makan cenaka dikin met e toji sipat dudu kinene, estojan simi tahu tahun mang

### Precautions

1. Warranty Card

The serial number is written on the rear panel of this unit. Copy the serial number and model number onto your warranty card and keep it in a safe place.

**Recording Copyright** 

Recording of copyrighted material for other than personal use is illegal without permission of the copyright holder.

3. AC Fuse

The fuse is located inside the chassis and is not user serviceable. If power does not come on, contact your Onkyo service center.

From time to time you should wipe off the front and rear panels and the cabinet with a soft cloth. For heavier dirt, dampen a soft cloth in a weak solution of mild detergent and water, wring it out dry, and wipe off the dirt. Following this, dry immediately with a clean cloth. Do not use rough material, thinners, alcohol or other chemical solvents or cloths since these could damage the finish or remove the panel lettering.

Power

WARNING

BEFORE TURNING ON POWER FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.

in betterness in crease and in-

Some models are designed for use only with the power supply voltage of the region where they are sold.

European models

(except U.K.): Canadian models: AC230V, 50Hz AC120V, 60Hz AC 240V, 50Hz

U.K. & Australian models: Worldwide models:

120 and 220V switchable, 50/60Hz


Voltage Selector (Rear Panel)

Worldwide models are equipped with a voltage selector to conform with local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on. Voltage is changed by sliding the groove in the switch with a screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on. Models without a voltage selector can only be used in areas where the power supply is the same as that of the unit.

- 6. Cleaning of the internal parts should be performed only by qualified service personnel.
- 7. Spillage Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.
- 8. Damage Requiring Service The unit should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen or liquid has been spilled into the unit;
  - C. The unit has been exposed to rain; or
  - D. The unit does not appear to operate normally or exhibits a marked change in performance; or

trans tilke (k.) i skatemond morthad bedding kirdi

- The unit has been dropped or the enclosure damaged.
- Servicing The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to qualfied service personnel.

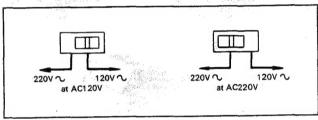

**Tuning Step Frequency Switch (Bottom)** 

Worldwide models are equipped with a switch that controls the AM (9kHz/10kHz) and FM (50kHz/200kHz) band tuning steps. Be sure to set this switch to match the tuning step frequency in your area.

U.S.A. and Canada 10kHz/200kHz

Other area 9kHz/50kHz

### Memory Preservation AND TO HONG COMMO

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves the contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory, the power switch must be turned on and off a few times each month to keep the back-up system operative.

The memory preservation period after power has been turned off varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of a few weeks after the last time power has been turned off. This period is shorter when the unit is exposed to a highly humid climate.



# Before using this unit

### 1. Supplied Accessories in Surage teamshop Sames . The ide Miller We have the line of


antenna × 1

AM loop





### 2. Transmitter Battery Insertion (TX-902 only)

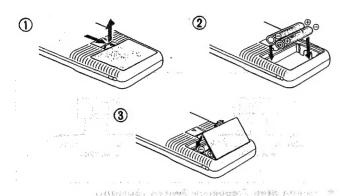

- 1 Push the battery cover on the rear of the transmitter in the direction of the arrow and lift it up.
- Load the two batteries that came with the transmitter or two batteries listed in the table. Load them with the + and - ends facing as shown in the diagram.

were the state of the state of


The MAN Ment of the form of the state of the state of the SALE

ing it was a constitution of the production of the second state of the second state of the second state of the second state of the second seco to the engineer of the enginee

many managements of the constraint of the

3 Put the battery cover back in place.

the property of the second of

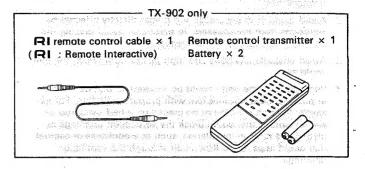

THE REPORT HERE SEE THE PROPERTY OF THE SECURITIES AND CONTRACT FOR CONTRACT SECURITIES.

angal karahijika gangan gankan gankan kilipinan karahiji karahili dan Kalingan mengangan berancak

### ME REPORT DESIGNATION OF DELECTION AND SERVE Use of Batteries

- The remote control transmitter is powered by two batteries. Before using this unit for the first time, insert the two batteries (included) as shown in the diagram.
- Average battery life is about one year. This period may be shorter depending on the frequency of use and environment (temperature and humidity) in which the remote control transmitter is used.
- If the remote control transmitter does not operate even though front panel controls function normally, the batteries should be replaced. Use only batteries listed in the following chart.

Type	Voltage	Size
Manga-		AA
nese	1.5V	R6 UM-3

### NOTES:

- 1. Do not leave an expired battery in the case as it may leak or damage the battery case.
- 2. When inserting the batteries, be sure the (+) and (-) ends are properly aligned.
- 3. Do not use nickel-cadmium (rechargeable) batteries.

- 4. Do not use one specified (manganese) battery and one alkaline battery at the same time.
- 5. Replace both batteries at once; do not use one old and one new battery together.

where a manager of well-pulifylands. Extrapalet for the

LINE SHOW SHOW BUT TO SEE THE SECOND STREET


The space of the second of the



### System connections

Do not plug in the cord until all connections have been made.

Switch the main power switch off before performing connections. Also be sure to perform left and right channel connections properly.

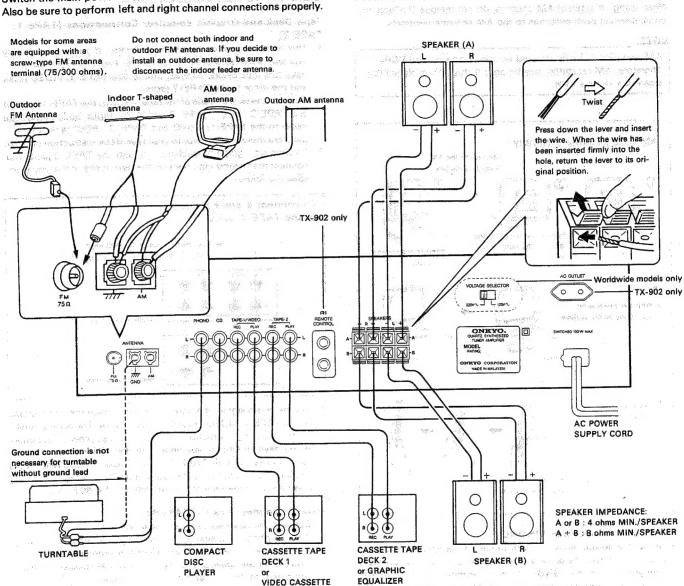


RECORDER

### **FM Antenna Connections**

Use the T-shaped antenna if you live in an area where signal strength of FM broadcasts is high. Connect the antenna to the FM 75 ohms terminals and place the antenna on a wall or other surface in the position in which reception is best. If signal strength is low in your area, use a multi-element FM outdoor antenna. Consult your Onkyo authorized service center about the right type of antenna for your

- 1. Do not connect both the indoor T-shaped antenna and an outdoor FM antenna. If you decide to install an outdoor antenna, be sure to disconnect the indoor T-shaped antenna.
- 2. Do not use the same antenna for both FM and TV reception since the FM and TV signals can interfere with each other. If you must use a common FM/TV antenna, use a directional linkage type splitter.

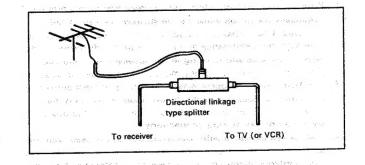

and realizable growings with the property of the property of a water but the fact has the to the before the part of the plants and the section of Andrew with the execution of the contraction of the contraction of the contraction of

the E-thoughter our note of an addition may be a count by




### **AM Antenna Connections**

An AM loop antenna is included in the installation instructions bag. Take out the connection line and connect it to the AM antenna terminals. This loop antenna can be placed on top of any stable surface or attached to a wall. Try several positions to determine which gives the best reception. Be sure the antenna is not near a speaker, power cord, television set, VCR, or motorized appliances. When using an external AM antenna, do not remove the loop antenna; connect both antennas to the AM antenna terminals.

#### NOTE:

AM reception is easily affected by television sets and VCRs. Therefore, AM reception may be poor if this unit is placed too close to a TV or a VCR.

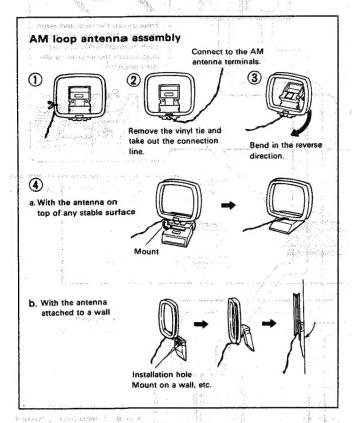

### **Turntable Connections (PHONO)**

Connect the output leads of the turntable to the PHONO jacks.

Be sure to connect the ground (earth) lead wire from the turntable to the ground terminal (GND) (Antenna terminal). Lack of proper ground connection will cause hum. Turntables not provided with GND wires do not need to be connected.


- Place the turntable on a firm shelf or deck free from vibrations (especially those generated by the speaker system). If the turntable is permitted to pick up such unwanted vibrations, not only with the performance of the unit drop, but distortion in the bass frequencies and howling in the speakers may also occur.
- 2. Check the turntable instruction manual for any other precautions.
- The loud noises that occur when connecting and disconnecting
  the turntable leads, replacing the cartridge or lowering the
  tonearm could damage the speakers. Always turn the power
  switch off before making connections.
- 4. If an Onkyo turntable with remote control jack is used with this unit, the remote control transmitter can also be used to start and stop turntable operation. In this case, the turntable and TX-902 must be connected with a remote control cable. Insert the plug into the PHONO jack of the REMOTE CONTROL on the rear panel of the TX-902. (Please refer to "Connections for Remote Control on page 6.) (Canadian models only)

## Compact Disc Player or Other Component Connections (CD)

Connect the output leads of the CD player or an additional audio component to the CD jacks. An Onkyo CD player with remote control that has the RI mark can be operated by the TX-902. (Please refer to "Connections for Remote Control" on page 6.) For more details, refer to your CD player instruction manual.

### Tape Deck and Graphic Equalizer Connections (TAPE-1, TAPE-2)

- This unit has facilities for two tape decks. If you are using only one tape deck, connect it to the TAPE-1/VIDEO jacks. If you have two tape decks, connect one to the TAPE-1/VIDEO jacks and the other to the TAPE-2 jacks.
- Connect the output leads of the tape decks to the TAPE-1/VIDEO and TAPE-2 "PLAY" jacks. Connect the input leads of the tape decks to the TAPE-1/VIDEO and TAPE-2 "REC" jacks of the unit. For more details, refer to your tape deck instruction manual.
- To connect a graphic equalizer, too, use the TAPE-2 jacks and connect the second tape deck to the tape jacks of the equalizer. (See the figure)

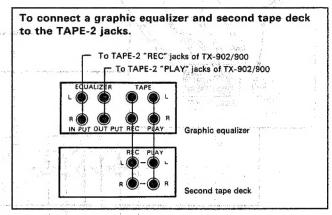

- For the audio signal of a VDP, VCR, etc., make the connections to the TAPE-1/VIDEO "PLAY", "REC" jacks. For details, refer to the operating instructions of the video equipment concerned.
- If you have an Onkyo tape deck with the RI remote control
  jack, connect it to the TAPE-1/VIDEO jacks. Please refer to the
  section "Connections for Remote Control" on 6 page regarding
  connection of the remote control cable. (TX-902 only)

### Speaker Connections (SPEAKERS)

- 1. Connect the speakers to A and/or B terminals.
- When connecting speakers, proper polarity is important. Always connect the (+) terminal (red) on this equipment to the (+) terminal on the speaker and the (-) terminal (black) on this equipment to the (-) terminal on the speaker.
- Do not connect a single speaker in parallel to the right and left channel outputs.
- 4. Use speaker cables that have a low impedance and that are as short as possible.
- Attach speaker cables to the rear panel speaker terminals with care, being sure that connections are made firmly and that there wis no possibility of a short circuit occurring.

on the well in the mississipped by the first of the property

THE PROPERTY OF THE PROPERTY OF THE PROPERTY OF

(機能量級)學特別等等

relacional Pale Vola de Maren de d

### AC Outlets


SWITCHED: (TX-902 only)

An AC outlet is switched on and off by the Power button on the front panel and remote control transmitter. Capacity is 100

CALL TERRESTANCE TRANSPORTS OF THE AMERICAN CONTRACT SET

Australian model (TX-902 only)

Sympoth Syman annight arm Subtracts

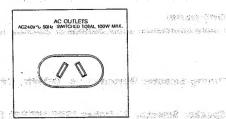


### (TX-902 only)

Markey Subscript 1. C. Strait

### Connections for Remote Control (REMOTE CONTROL)

- The upper and lower RI remote control jacks have the same function.
- A cassette tape deck and compact disc player that have the Onkyo RI mark can be operated, using the accessory remote control transmitter.

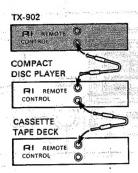

An RI remote control cable equipped with a 1/8" (3.5mm) diameter miniature two-conductor phone plug is attached to the TX-902 and to any compact disc player, with the RI mark.

To use an Onkyo compact disc player and cassette tape deck with the RI mark, insert the accessory remote control cable plug into the REMOTE CONTROL jacks. As far as connecting sequence is concerned, it doesn't matter whether the cable is connected from the TX-902 to the cassette tape deck or to the compact disc player. The remote control transmitter is operated by facing it towards the remote control sensor of the TX-902.

Remote control operation is not possible when only the remote control cable is connected. Remote control cable and pin cord must be connected.


respective and the

#### Canadian models only

·Authorities

If you own a Canadian model of the TX-902, the Onkyo turntable can be operated, using the accessory remote control transmitter.

- If your turntable has an RI mark on it, insert the accessory RI remote control cable plug attached to the Onkyo turntable with the RI mark into the PHONO of the TX-902's REMOTE CONTROL
- Onkyo turntables that can be remote controlled but do not have the RI mark. This equipment has a 7-pin DIN jack on the rear panel. Connect this jack and the jack on the rear of the TX-902 with the special cable for this purpose, which is sold separately.

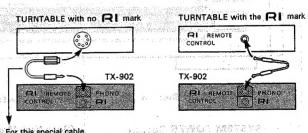

IN THE SAME AT

For this special cable. Contact an Onkyo Service Center. For a turntable (3.5 mm pin to 7-pin plug cable) part number; 2010140

### Direct function feature

#### Sentation & notational ! NOTE:

This function works when an Onkyo cassette tape deck or CD player with the RI mark is connected to a TX-902 with an RI remote control cable.

Just by directly operating the desired component (compact disc player, or tape deck), the TX-902's input selector automatically switches to that component. The component that was being used stops, and the desired component starts operation. Therefore, it is not necessary to switch the TX-902's input selector when changing listening sources.

### Example

When the compact disc player's play button is pressed, the TX-902's input selector will switch automatically to "CD." If the current listening source was a tape deck, tape playback will stop and the compact disc player will start playing.

NOTE:		21.5						
The di	rect fur	nction	feature	does	not apply	to	turntable.	




### Control positions and names

NOTE:


 The features, specifications, and display for the TX-902 and TX-900 are slightly different. Read this manual carefully to operate the model you have purchased correctly.

Front panel

For more information about buttons or controls, turn to the page number listed in the [ ].

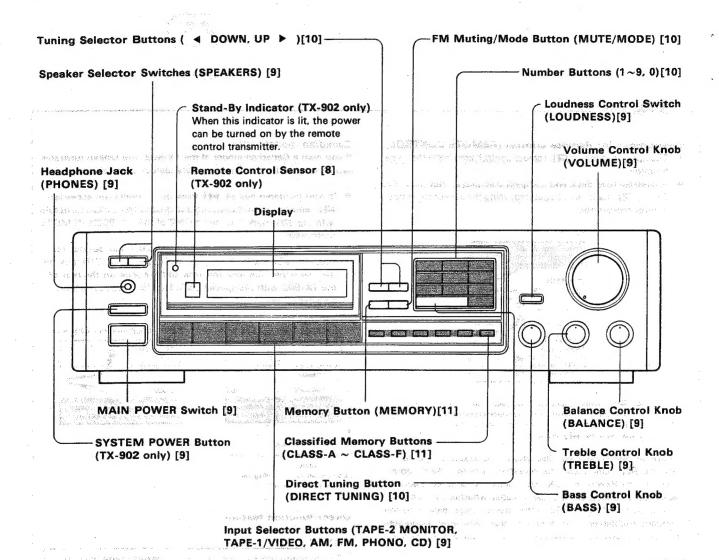

### Display and indicators

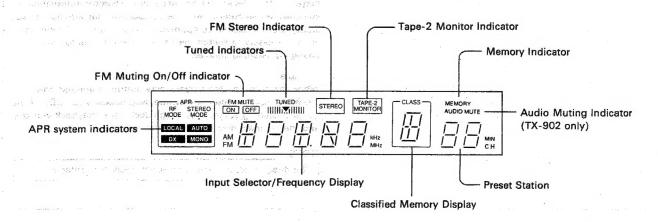

### Remote control transmitter (TX-902 only)


 The tuner amplifiers are provided with the following remote control transmitters:

nd Canadian		RC-183S
 area models	u jagawa igo	RC-184S

#### Power Button (POWER) BING LAND B Input Selector Buttons (TAPE-1, Phono Operation Button (PLAY/REJECT) TUNER, PHONO, CD, TAPE-2) [9] (RC-183S only) \* When the TUNER button is pressed, the This button is used to operate the turntable. station which was received previously is The phono operation button can be used only recalled. Selection of AM or FM should be when the PHONO input selector button has done on the main unit. been pressed. Each time the phono operation button is pressed, the remote control transmitter alternately emits the play or reject command. **Tape Operation Buttons** CD Operation Buttons (CD) (DECK-A, DECK-B) These buttons are used to operate an ONKYO These buttons control Onkyo double cassette CD player with the RI mark. tape decks that can be remote controlled. Use : Press this button to play the CD the DECK-B buttons to control single cassette tape decks with the RI mark. : Press this button to pause the CD •/ : When this is pressed, the recording play back. To resume disc play, stand-by mode is entered. press the PLAY button. : The tape plays, moving from right DISC: Press to use for sequential selection to left, or, in the recording stand-by of discs in the order they were mode, recording begins. 🧀 toaded on the CD changer. : Interrupts all operations. (RC-183S only) : The tape plays, moving from left to : Press this button to stop the CD right, or, in the recording stand-by player: wastered and the standard of the mode, recording begins. : Press this button to go back to the Fast forward from right to left. beginning of the current track and : Fast forward from left to right. again to skip back to the previous track. : Press this button to skip to the next track, the respect will have been fire **Tuner Operation Buttons (TUNER) [11]** Audio Muting Button (AUDIO MUTE) and CLASS: Class selector button Indicator This button temporarily switches off the sound buttons from the speaker or headphone. Pressing this button will operate the TX-902 audio muting circuit. The audio muting indicator "AUDIO MUTE" will flash. Pressing the button again or using the POWER button on the remote control transmitter to turn the power on will Volume Buttons (UP, DOWN) turn off the audio muting.

### Using the remote control transmitter

- Remove the batteries if the remote control transmitter is not going to be used for a long time.
- 2. The batteries of the remote control transmitter must be replaced periodically.
- This unit uses infrared rays. Therefore, commands may not be received properly if the front panel of this unit is exposed to bright light. To prevent this from occurring, place this unit so that it is not directly exposed to bright light.
- 4. If this unit is placed inside an audio rack behind a glass door, the door should not have colored glass or have any decorations on it, since this could shorten the range or prevent commands from being received.
- Use of other infrared remote control devices in the same room may cause interference.
- The transmitter operates up to a distance of about five meters (16 feet). The transmitting window must always be pointed at the reception window when a command is sent to the TX-902.
- If this remote control transmitter does not operate properly, confirm that the batteries are not dead. If the problem persists, contact your Onkyo Service Center.

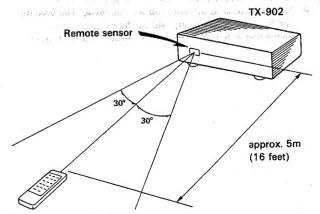


were the control of the property of the control of



### **Operations**

To listen to your favorite Source

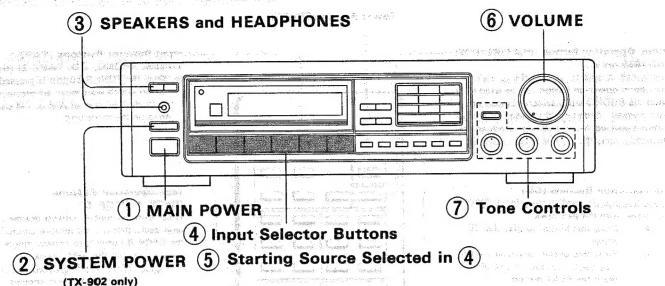

Press the POWER switch to turn on the power. Press this switch to switch the on/off status of the power supply.

ga Jawa Ingringang and Additional Colonian 🗗 🐧

- 2 Press this button to turn on power and the AC outlets on the rear panel when the unit is in the standby mode. Power can also be turned on by using the remote control power button (TX-902 only)
- Select the desired pair of speakers by depressing the corresponding speaker selector switch.
  - This unit can drive two pairs of speakers in pairs (A or B) or fours (A + B). To listen to both speaker systems at once, depress both speaker selector switches.
  - Stereo headphones with a standard binaural plug can be connected here.
- Press one of the desired Input Selector Button (CD, PHONO, FM, AM, TAPE-1/VIDEO).

Make sure that the connections between the input sources are correct.

- The button pressed is shown in Display. For FM or AM, the band and the frequency are shown in Display.
- Confirm that the TAPE-2 MONITOR indicator is off when a source other than the TAPE-2 MONITOR has been selected.
   Also check the audio muting is off... (TX-902 only)
- 5 Start play of the selected input source.

SHE SERVICE

- Follow the operating instructions of that unit.
- If FM or AM is selected, please refer to the section "Tuner Reception".
- 6 Adjust the Volume Control knob to the appropriate level.
  - Turn clockwise to increase the volume level. The volume can be adjusted manually and by the remote control transmitter's Volume UP/DOWN button. (TX-902 only)

7 Adjust the Tone Controls to obtain the desired tone setting.

Island IN IST LEXT DECIMENT LOSSING MINER AF

- Bass Control Knob (BASS)

  Adjust to strengthen or weaken bass response.
- Treble Control Knob (TREBLE)

  Adjust to strengthen or weaken treble response.

to the proceedings of the control of the control of the first state of

tigal representation of the security of the control of the control of the security of the control of the contro

- Balance Control Knob (BALANCE)

  Use this control to adjust the relative volume levels of the left and right speaker systems.
- When listening at low volume levels, depress this switch to boost the very high and very low frequencies to provide a more natural sound.




### **Tuner Reception**

Press the FM or AM Input Selector button and make sure that the TAPE-2 MONITOR indicator is off and audio muting is off.

a construire deservation archives are expensive to the construire of


### ■ Tuning with the TUNING buttons

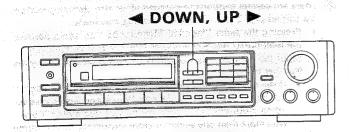

To tune in an FM or AM station not stored in the memory, press one of the Tuning selector buttons. If you press UP, the frequency is increased. Pressing DOWN decreases. Note that the frequency is changed in 50kHz (or 200kHz) steps in FM and 9kHz (or 10kHz) steps in AM when the Tuning selector button is pressed in single steps. If this button is pressed continuously for more than 0.5 seconds, the auto tuning mode is entered, and frequencies are scanned automatically. When a broadcast signal is received, scanning stops and that frequency is displayed. If a different frequency is desired, press the button once again.

- Receiving a station by inputting the frequency for the station directly (Direct Tuning)


If the frequency for the desired station is known, input the frequency number directly.

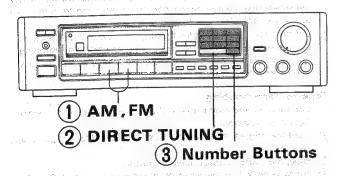

- 1) Press the AM or FM button of the Input selector buttons.
- 2) Press the DIRECT TUNING button.
- "--" or "-" will flash for 16 seconds in the Frequency Display.
   Input the desired frequency number by using the Number Buttons while the cursors are flashing. For instance, if you wish to receive the station of 88.10MHz, press the Number Buttons, 8, 2, 1, and 0.
  - In areas where AM frequencies are set in 10kHz steps, inputting a number to the 10kHz digit sets 0 to the 1kHz digit automatically.
  - If the desired frequency set in this operation does not exist, the frequency which is the nearest and lower than the desired frequency will be received. If the frequency set is not in the receive frequency range, the frequency flashes for two seconds and then the previous frequency will be displayed.
  - If a wrong frequency has been set, press the DIRECTTUNING button and start again.

# ■ How to use the FM Muting/Mode Button (MUTE/MODE)

In the Muting ON (STEREO) setting, FM stereo reception is possible and the muting circuit suppresses interstation noise and weak FM stations. In the OFF (MONO) setting, interstation noise will be heard and even weak FM stations can be received. (Muting/Mode operation is effective for only FM reception.)

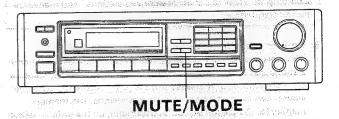

 The Stereo indicator will light up if the broadcast is being received in stereo. The Stereo indicator will not light up if the broadcast is monaural or too weak to be received in Stereo.

Automatic Precision Reception System (FM Mode) — APR system is Onkyo's unique computer-controlled system. APR system automatically sets the RF stage gain (Distance/Local), stereo/mono reception modes to the proper settings for the quality of the broadcast currently being received. This indicator changes each time the APR circuit switches between the LOCAL/DX or AUTO/MONO to show the current APR setting. (APR system is effective for only FM reception.)

#### NOTES:

- When FM MODE button is not AUTO, the APR Mode selection function does not operate, and the STEREO MODE indicator is forced to "MONO".
- The "MONO" indicator lights up for FM monaural reception.
- The RF MODE will indicate LOCAL when sufficient signal is received.

accan be the



### Classified Memory Function

The memory can be divided (classified) for different users or programs of stations.


en proposition in conservation in the first transfer in the section in the section in the section in the section is the section in the section is the section in the sectio

#### NOTE:

There are times when frequencies are left in the machine's memory from the final testing done prior to shipment. If this is the case with your TX-902/900, cancel unnecessary preset stations according to "How to cancel memorized stations" and memorize desired frequencies.

#### How to classify stations

With this model, six classes (CLASS A to F) are available and stations can be memorized in any class. A total of 30 stations can be memorized in classes from A to F. Although the same station can be memorized in different classes, the memory number for the station will differ depending on the order in which the station is memorized in the classes.

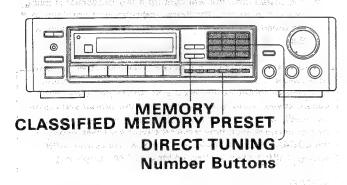


- Tune in the desired station (see section on "Tuner Reception").
   Press the MEMORY button.
  - The MEMORY indicator will flash for B seconds.
- 3 Press the desired Classified Memory button (one of buttons A to F).
  - The station is memorized in the selected class with the memory number which is the smallest of the unoccupied numbers in the class.

By repeating the operations above, up to 30 stations can be memorized. If an attempt is made to memorize 31 stations or more, "FULL" will be displayed in the Input Selector/Frequency Display, indicating that no more stations can be memorized.

### ■ How to cancel memorized stations

Retrieve the class number you want to cancel (see "How to retrieve memorized stations") and then press the MUTE/MODE button while holding down the MEMORY button. Another station can be memorized with the memory number which has been cancelled.

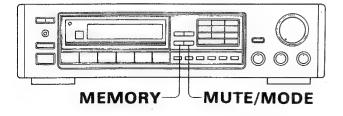

#### How to retrieve memorized stations

- (1) Press the Classified Memory button for the desired class. If remote control is used, the class next to the present one is retrieved when the CLASS button is pressed. (TX-902 only)
  - The memory number (station) which was being received before the class is retrieved will be received.
- There are several methods to proceed after the above operations are carried out. Use any of the following methods.
  - a. Pressing the same Classified Memory button again permits the next preset memory number (station) to be received.
  - Input the memory number you wish to receive by using the Number buttons.
    - If the memory number consists of 2 digits, input two numbers, immediately one after the other. For instance, when inputting "15", "15" will not be registered if you wait more than one second before inputting "5", resulting in only "1" being registered.
    - If a number other than a number from 1 to 30, or a number which has not been memorized is input, the number flashes for 2 seconds and then the number which was displayed before will be displayed.
    - If a number between 1 and 3 is pressed, the display and station are changed 1 second later.
  - c. When the 

    PRESET ▶ button of the remote controller is pressed, the memory number of the class currently being received will be incremented or decremented. Keeping pressing the button increments or decrements continuously. After the maximum or minimum number is reached, the next class or one before the present class will be entered.

    (TX-902 only)

#### **Tape Recording**

- Make all connections between the tape deck and the unit as shown in the System Connections Diagram.
- (2) Radio: Press the FM or AM Input Selector button.
  Record: Press the PHONO Input Selector button.
  CD: Press the CD Input Selector button.
- 3 Put the tape deck in the recording mode. The recording can be monitored through the speakers or headphones as desired. For TAPE-2, turn on the corresponding Tape Monitor button to hear the signal that, having been recorded, is returned from the deck to the TX-902/900. (if the deck has three heads)...
- 4 Set the proper recording level using the controls on the tape deck used for recording. Also, during recording and dubbing operations, never change the positions of any controls (bass, treble, etc.) on this unit.

### Tape-to-Tape Dubbing

- Connect the two tape decks to this unit as shown in the System Connections diagram.
- 2 Load the original tape in tape deck 1 and the blank tape in tape deck 2.
- ③ Press the TAPE-1 Input Selector button.
- Put tape deck 1 in the playback mode and tape deck 2 in the recording mode.
- The source signal can be monitored through the speakers or headphones, when the TAPE-2 MONITOR button is in the OFF position. If tape deck 2 has three heads, the just-recorded signal can be monitored (when the TAPE-2 MONITOR button is in the ON position). Refer to the tape deck instruction manuals for more details.

### Using the Graphic Equalizer

- (1) Connect the graphic equalizer to the TAPE-2 jacks on the rear panel.
- (2) If a second tape deck is used, connect it to the tape jacks on the graphic equalizer.
- (3) Press the TAPE-2 MONITOR button.
- Follow the graphic equalizer operating instructions.
- To record an equalized signal, use tape deck 2 (connected to the equalizer) for recording.



###GWATEDEREK

### Trouble shooting guide

NOTE (TX-902 only):

If a problem occurs, first operate the unit using the front panel controls to confirm that it is not due to a malfunction (or worn out batteries) of the remote control transmitter.

*Trouble   recipits is some	Cause agreement provide the	Remedy
No power.	Power cord is disconnected.     AC fuse blown.	Connect power cord. Contact Onkyo Service Center.
Power but no sound.	<ul> <li>Tape monitor switch on.</li> <li>Audio muting switch on. (TX-902 only)</li> <li>Bad connections.</li> <li>Amplifier protection circuitry has been activated.</li> </ul>	<ul> <li>Switch to off.</li> <li>Switch to off by remote control transmitter.</li> <li>Check input leads, speaker leads, pin plugs, etc.</li> <li>Contact Onkyo Service Center.</li> </ul>
Hum, low frequency noise.	Poor or no input ground.  Poor or no phono motor ground.  Output  Description:	Check outer conductor of input plugs. Check for proper ground connection.
Howling when the volume is turned up.	Turntable and speakers are too close together.	Move them farther apart.
Rough or scratchy sound. High range is not clear.	<ul> <li>Stylus of pick-up is worn.</li> <li>Stylus tip is dirty.</li> <li>Treble control too high.</li> </ul>	Replace: Clean. Turn treble control down.
AM stations cannot be received.	AM loop antenna is not attached.	Connect the included AM loop antenna to the AM antenna terminals.
Buzzing noise on AM (particularly conspicuous at night or with weak stations).	Noise from electrical apparatus such as fluorescent lamp.	Move AM loop antenna to different position.     Set up outdoor AM antenna.
High pitched noise or buzzing noise on AM.	• Noise from TV.	<ul> <li>Place the AM loop antenna as far as possible from the TV.</li> <li>Move unit away from TV set.</li> </ul>
Crackling noise on AM and FM.	Noise caused by turning fluorescent lamp on and off. Noise from automobile ignition.	<ul> <li>Move antenna as far as possible from the fluorescent lamp.</li> <li>Install and FM outdoor antenna as far as possible from the road.</li> <li>Change the position or direction of the outdoor antenna.</li> </ul>
FM tuned and stereo indicators light but sound is distorted and stereo separation is bad.	<ul> <li>Station is too strong.</li> <li>Multiple reflection of the radio waves because of tall buildings or mountains.</li> </ul>	Change to T-shaped antenna.  Use antenna which has better directivity and select a point where the distortion is least.
FM tuned and stereo indicators flicker on and off and hiss is heard on FM.	<ul> <li>Station is too weak.</li> <li>Stereophonic FM broadcasts cover only about half the distance of an ordinary broadcasts.</li> </ul>	Install an outdoor FM antenna. Change the position or direction of the outdoor antenna.
No station is recalled when a preset station number is input.	The power switch has not been turned on for a long time or the power cord has been unplugged for a long time.	<ul> <li>The memory contents are lost if the power switch is not turned on a few times each month. Store all stations again and remember to turn the power on a few times each month.</li> </ul>
Front panel controls function but remote control transmitter does not. (TX-902 only)	No batteries in remote control transmitter. Batteries have worn out.	Insert batteries.     Replace batteries.

The tuning steps by which the tuned frequency changes on each band have been set at the factory to the proper value for the country where each unit is to be sold. If you use the unit in a country where a different tuning step is required or if the broadcast frequencies in your country change so that you can not tune in radio stations precisely, contact your authorized Onkyo Service Center.



### Specification

Musical Power Output: Continuous Power Output:	50 watts per channel, min. RMS, at 8 ohms, both channels driven, from 40Hz to 20kHz, with no more than 0.2% THD.  2 × 120 watts at 4 ohms, 1kHz (DIN)	40 watts per channel, min. RMS, at 8 ohms, both channels driven, from 40Hz to 20kHz, with no more than 0.3% THD.
Continuous Power Output:	2 × 120 watts at 4 ohms, 1kHz (DIN)	
Continuous Power Output		5 to 05 to 144 at 4 at 14 at 1
	2 × 80 watts at 8 ohms, 1kHz (DIN)	2 × 95 watts at 4 ohms, 1kHz (DIN)
	2 x 65 watts at 4 ohms, 1kHz (DIN)	2 × 55 watts at 4 ohms, 1kHz (DIN)
Total Harmonic Distortion:	2 × 55 watts at B ohms, 1kHz (DIN) 0.2% at rated power	2 × 45 watts at 8 ohms, 1kHz (DIN) 0.3% at rated power
Land the same of t	0.1% at 30 watt output 0.2% at rated power	0.1% at 30 watt output 0.3% at rated power
IM Distortion:	0.2% at rated power 0.1% at 30 watt output the second received and second received at 30 watters.	0.1% at 30 watt outut
Damping Factor:	50 at 8 ohms	50 at 8 ohms
Frequency Response:	20 - 30,000 Hz ± 1dB	20 - 30,000 Hz ± 1dB 20 - 20,000 Hz ± 0.8dB
RIAA Deviation: Sensitivity and Impedance:	20 - 20,000 Hz ± 0.8dB Phono: 2.5mV/50 kohms	
Sensitivity and impodules in a program in	CD/Tape Play: 150mV/50 kohms	CD/Tape Play: 150mV/50 kohms
A STATE OF THE PROPERTY OF THE	Tape Rec: 150mV/3.5 kohms	
Phono Overload:	120mV RMS at 1kHz, 0.2% THD Phono: 80dB (at 5mV input, IHF-A)	120mV RMS at 1kHz, 0.3% THD Phono: 80dB (at 5mV input, IHF-A)
Signal-to-Noise Ratio:	CD/Tape: 100dB (IHF-A)	CD/Tape: 100dB (IHF-A)
Tone Controls:	Bass: ± 10dB at 100Hz Treble: ± 10dB at 10kHz	Bass: ± 10dB at 100Hz
		Treble: ± 10dB at 10kHz
Muting:		
with the real part of a part of the a residence of		The state of the s
TUNER SECTION FM:	Company of the compan	en de la companya de
Tuning Range:	European models:	nEuropean models: https://www.com/selections.com/
1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1	87.5 - 108.0MHz (50kHz steps)	87.5 — 108.0MHz (50kHz steps)
and the second of the second o	Canadian models:	Canadian models: 87.9 — 107.9MHz (200kHz steps) Mono: 12.4dBf, 1.2uV, 75.chms
Llegisla Congishustra	87.9 — 107.9MHz (200kHz steps) Mono: 12.4dBf, 1.2μV, 75 ohms	Mono: 12.4dBf, 1.2μV, 75 ohms
Usable Sensitivity:	1.2µV (S/N 26dB, 40kHz Devi.)	1.2µV (S/N 26dB, 40kHz Devi.)
word with a super depleting of the detail of the	season was a second of the common DIN the second and a second of the common DIN the second of the common second of the common of the common second of the co	75 ohms DIN
	Stereo: 19.2dBf, 2.5µV, 75 ohms 25µV (S/N 46dB, 40kHz Devi.)	Stereo: 19.2dBf, 2.5µV, 75 ohms 25µV(S/N 46dB, 40kHz Devi.)
and received the same of the same in the same in the same same same same same same same sam	75 ohms DIN	25μV(S/N 46dB, 40kHz Devi.) 75 ohms DIN
50dB Quieting Sensitivity:	Mono: 18.2dBf, 2.2μV, 75 ohms	Mono: 18.2dBf, 2.2μV, 75 ohms
	Stereo: 38.2dBf, 22μV, 75 ohms	Stereo: 38.2dBf, 22μV, 75 ohms
Ouplaid Hallon	1.5dB 4 85dB 4 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	1.5dB 85dB
Image Rejection Ratio:	90dB	90dB
Signal-to-Noise Ratio:	Mono: 70dB	Mono: 70dB
	Stereo: 65dB	Stereo: 65dB
Selectivity	50dB DIN (±300kHz, 40kHz dev.) 50dB	50dB DIN (±300kHz, 40kHz dev.) 50dB
AM Suppression Ratio:	Mono: 0.15%	Mono: 0.15%
Hallionic Distortion.	Stereo: 0.30%	Stereo: 0.30%
Frequency Response:	30 - 15,000Hz ± 1.5dB	30 - 15,000Hz ± 1.5dB
Stereo Separation:	40dB at 1kHz	40dB at 1kHz
AM:	And the state of t	
Tuning Range:	European models:	European models:
And the second s	522 — 1611kHz (9kHz steps)	522 — 1611kHz (9kHz steps) Canadian models:
y - 3 m i 1	Canadían models: 530 — 1710kHz (10kHz steps)	530 — 1710kHz (10kHz steps)
	Saudi Arabia & Worldwide models:	Saudi Arabia & Worldwide models:
	531 — 1602kHz (9kHz steps)	531 — 1602kHz (9kHz steps)
Usable Sensitivity:	30μV	30μV
Image Rejection Ratio: IF Rejection Ratio:	40dB 40dB	40dB
Signal-to-Noise Ratio:	40dB for special conservation of the property	40d8
Harmonic Distortion:	0.8%	0.8%
CENERAL		
GENERAL Power Supply:	European models: AC230V, 50Hz	European models: AC230V, 50Hz
·	Canadian models: AC120V, 60Hz	Canadian models: AC120V, 60Hz
	U.K& Australian models: AC 240V, 50Hz Worldwide models: 120 and 220V switchable, 50/60Hz	U.K& Australian models: AC 240V, 50Hz Worldwide models: 120 and 220V switchable, 50/60Hz
Dimensions (W $\times$ H $\times$ D):	Worldwide models: 120 and 220V switchable, 50/60Hz 455 × 120 × 316 mm	455 × 120 × 310 mm
Pilliguations (44 V LI V P.)	17-15/16" × 4-6/8" × 12-7/16"	17-15/16" × 4-6/8" × 12-7/16"
	7.8 kg., 17.2 lbs.	7.0 kg., 15.4 lbs.

Remote control transmitter RC-183S/RC-184S (TX-902 only)
Transmitter:
Signal range:
Power supply:

Remote control transmitter RC-183S/RC-184S (TX-902 only)
Infrared
Approx. 5 meters (16ft. 4")
Two "AA" batteries (1.5V × 2)

Specifications and features are subject to change without notice.

Herzlichen Glückwunsch zum Kauf des Empfängers TX-902, TX-900 von ONKYO.
 Bitte lesen Sie sich diese Bedienungsanleitung vor dem Anschließen und der Inbetriebnahme dieses Geräts durch.
 Wenn Sie sich an die in dieser Anleitung erwähnten Tips halten, werden Sie schnell in der Lage sein, die Qualität des TX-902, TX-900 voll auszukosten.
 Bitte heben Sie diese Bedienungsanleitung auf, da Sie sie vielleicht noch einmal brauchen.

	The control of the co	il ja
and the second s	INHALT STATEMENT OF THE PROPERTY OF THE PROPER	Spirit.
Eigenschaften		14
	1	14
Vorsichtsmaßnahmen		
Vor der Inbetriebnahme dieses Geräts	til per tylling ander skrift discountly manuscreen exist.	16
Anschlußdiagramm	es - Employa Paparan, popolisi sambili di Les ser paramentalipi. Vendikih selekuluk dapangan di Paliki	16
Bedienungselemente und Bezeichnungen	그는 그는 한민국의 그림을 가는 이 가는 아이들 때문에 가장 있었다. 그리고 있었다고 있는 사람들은 사람들이 살아 없는 것이다. 그런 그렇게 되었다면서 그리고 있다고 있다고 있다고 있다고 있다면서 사람들이 되었다면서 그리고 있다고 있다고 있다고 있다고 있다고 있다고 있다고 있다고 있다고 있다	19
Bedienung		21
Betriebsprobleme und deren Behebung		24
Technische Daten	120 Editor Carlo Company Compa	25
1 DOIIIII DOIIO DE TOTA	e Banding Grant (m. 1801). Bertillen militat in den der Herbert bestellt in der Antonio der Antonio der Antonio	TT = 0

### Eigenschaften

- Reichlich saubere Leistung
   TX-902: 50 W kontinuierliche Leistung pro Kanal an 8 Ohm mit weniger als 0,2 % Klirrfaktor (2 × 65 W Kontinuierlich bei 4 Ohm DIN)
   TX-900: 40 W kontinuierliche Leistung pro Kanal an 8 Ohm mit weniger als 0,3 % Klirrfaktor (2 × 55 W Kontinuierlich bei 4 Ohm DIN)
- Getrennte Endstufe
   Während manche Receiver sich noch mit billigen IC-Leistungsverstärkerschaltungen zufrieden geben müssen, ist die Endstufe des TX-902/TX-900 aus Einzelelementen zusammengesetzt: Statt Chips von der Stange, originelles Design. Daher verfügt der TX-902/TX-900 über eine Endstufe, die perfekt auf die spezifischen Bedürfnisse dieses Receivers abgestimmt ist, und die so gewährleistet, daß nicht nur jederzeit satt genügend Leistung vorhanden ist, sondern daß auch bei niedrigen Impedanzen die Ausgabe stimmt.
- Speicherung von 30 UKW/MW Vorwahlen
- Klassifizierte Speicher
   Die Sendevorwahlen sind in sechs Speichern A bis F untergebracht. Das ermöglicht Ihnen, Ihre Vorwahlsender zum Beispiel nach Programmen und Musikrichtungen (Rock, Jazz, klassische Musik, Nachrichten, u.s.w.) zu ordnen. Eine zweite Möglichkeit ist die Aufteilung der klassifizierten Speicher unter den Familienmitgliedern (Speicher A für die Mutter, Speicher B für den Vater, C und D für die Kinder, u.s.w.). In jedem der klassifizierten Speicher können Sie gleich welche Sender eingeben.
- Direkte Sendereingabe: Direct Access Tuning
   Statt umständlich mit den UP und DOWN-Tasten das Frequenzband nach einem bestimmten Sender abzusuchen, tippen Sie ganz einfach und schnell die Frequenz des Senders mit Hilfe der Zahlentasten ein. Um zum Beispiel den Sender mit der Frequenz 103,50 Mhz zu wählen, drücken Sie einfach nacheinander die Tasten 1, 0, 3, 5, 0.
- APR System (automatischer Präzisionsempfang)
   Das von Onkyo entwickelte APR-System gibt jede UKW-Sendung in bester Qualität wieder. Der eingebaute Mikrorechner überwacht das Sendesignal und wählt die optimale Einstellung für RF local/DX und Stereo auto/mono. Die Einstellungen des APR-Systems werden durch die Anzeigen an der Vorderseite angezeigt.
- Sechs Programmeingänge, darunter Videoton, mit logikgesteuerten Tipptasten
- Zwei Paar Lautsprecherausgänge
- Loudness-Klangregler
- RI -kompatible drahtlose Fernbedienung (Nur für den TX-902)

### Aufstellung und Wartungen

### "ACHTUNG"

UM FEUER UND STROMSCHLÄGE ZU VERMEIDEN, SOLLTE DAS GERÄT WEDER REGEN NOCH FEUCHTIGKEIT AUSGESETZT WERDEN.

i kalak digipunya anggan antoni (ii ang in unitat an ii ang itan manakkata nastan a Nasifasanan na tang in wan in maka nasanan anggan indasa masan maka saman meni Nasifa ang ini makayan ang ini ang Masanan nasa akan ini kalah nasanah ang ini

### VORSICHT

UM STROMSCHLÄGE ZU VERMEIDEN, WEDER DAS GEHÄUSE (NOCH DIE RÜCKSEITE) ÖFFNEN. NICHTS IM GEHÄUSE DARF VOM BENUTZER GEWARTET WERDEN. WENDEN SIE SICH AN DEN QUALIFIZIERTEN KUNDENDIENST.



genden Vorsichtsmaßnahmen bitte beachten:

- 1. Staub und übermäßige Feuchtigkeit, direkte Sonnenbestrahlung sowie übermäßig hohe und niedrige Temperaturen vermeiden. rasilidado Chambia, pada disciplida ele
- 2. Darauf achten, daß keine Erschütterungen auf das Gerät übertragen werden. Diese Anlage daher niemals auf einer Lautsprecherbox abstellen.
- 3. Das Gerät immer auf einer stabilen und waagerechten Unterlage
- 4. Auf ausreichende Belüftung achten. Das Gerät daher nicht auf weiche Unterlagen (Teppich, Kissen usw.) stellen und die Belüftungsschlitze nicht abdecken (z.B. bei Regaleinbau), da anderenfalls die im Geräte erzeugte Wärme nicht abgeführt werden kann.
- Die Nähe von Heizkörpern und elektrischen Geräten mit starker Wärmeentwicklung vermeiden.
- Innenteile dürfen nur von einem qualifizierten Wartungstechniker eingestellt bzw. gereinigt werden.

### Vorsichtsmaßnahmen

#### 1 Garantieschein

Die Seriennummer dieses Gerätes finden Sie an der Geräterückseite. Tragen Sie diese zusammen mit der Modellnummer in die Garantiekarte ein. Die Garantiekarte an einem sicheren Ort verwahren

#### 2. Urheberrecht

Die Aufnahme von urheberrechtlich geschütztem Tonmaterial für andere Zwecke als private Verwendung ist ohne Zustimmung des Urheberrechtsinhabers nicht statthaft.

### 3. Netzsicherung

Die Sicherung liegt im Inneren des Geräts und soll nicht vom Anwender ausgewechselt werden. Wenn sich das Gerät nicht einschalten läßt, den Onkyo-Fachhändler benachrichtigen.

In regelmäßigen Abständen sollten Front- und Rückplatte sowie Gehäuse mit einem weichen Lappen abgewischt werden. Hartnäckiger Schmutz kann mit einem in milder Seifenlösung angefeuchteten und gut ausgewrungenen Lappen abgewischt werden. Anschließend mit einem sauberen Lappen trockenwischen. Keine scheuernden Stoffe, Verdünner, Alkohol oder andere chemische Lösungsmittel verwenden, da diese die Gehäuseoberfläche angreifen und die Beschriftung entfernen können.

### 5. Spannung

### WARNUNG

LESEN SIE SICH DIESEN ABSCHNITT GRÜNDLICH DURCH, BEVOR SIE DAS GERÄT ZUM ERSTEN MAL EINSCHALTEN.

Manche Modelle können nur mit der Spannung des Gebiets betrieben werden, in dem sie vertrieben werden.

RAAC 160 ARBO DI BIRRICA LUMRITI LETRESAGOR EX

Europäisches Modell außer

für Großbritannien:

230V, 50 Hz

Kanada:

120V, 60 Hz

Großbritannien und Australien: 240V, 50 Hz

Universalausführung:

120/220V umschaltbar.


50/60 Hz Berghade same afelian Strangelie

- Um einen störungsfreien Betrieb sicherzustellen, die fol- 7. Darauf achten, daß durch die Belüftungsschlitze keine Gegenstände eindringen und keine Flüssigkeiten auf das Gerät verschüttet werden.
  - 8. In den folgenden Fällen die Anlage von einem qualifizierten Wartungstechniker überprüfen lassen:
    - A. Wenn das Netzkabel oder der Netzschalter beschädigt ist.
    - B. Wenn Gegenstände oder Flüssigkeiten in das Gerät eingedrungen sind.
    - Wenn das Gerät übermäßiger Feuchtigkeit ausgesetzt wurde.
    - D. Wenn Betriebsstörungen bzw. anormale Betriebsbedingungen festgestellt werden.
    - Wenn das Gerät fallengelassen bzw. das Gehäuse beschädigt wurde.
    - 9. Nicht in dieser Bedienungsanleitung aufgeführte Wartungsarbeiten dürfen vom Benutzer nicht selbst ausgeführt werden. Falls solche Wartungsarbeiten erforderlich werden sollten: wenden Sie sich bitte an einen qualifizierten Wartungstechni-
    - Das Gerät entspricht den Bestimmungen der EG-Direktive 87/308/EWG.

and the state of the

### Spannungswähler (Rückseite)

Die Universalausführung dieses Modells ist mit einem Spannungswähler ausgerüstet. Dieser Spannungswähler wird werksseitig vor dem Versand auf 220 V eingestellt. Vor der Inbetriebnahme die Einstellung überprüfen und ggf. korrigieren. Dazu den Spannungswähler mit einem Schraubenzieher bis zum Anschlag nach links oder rechts in die entsprechende Position schieben. Ausführungen ohne Spannungswähler können nur mit der auf der Geräterückseite angegebenen Spannung betrieben werden.

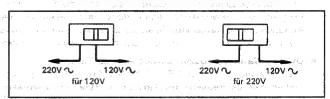

### Frequenzschrittschalter (Geräteboden)

Alle Modelle sind mit einem Schalter zur Regelung der Frequenzschritte des MW- (9 kHZ/10 kHz) und UKW-Empfangsbereichs (50 kHz/200 kHz) ausgestattet. Bitte darauf achten, daß dieser Schalter den lokalen Frequenzintervallen entsprechend eingestellt ist. USA und Kanada 10 kHz/200 kHz

Für alle anderen länder

9 kHz/50 kHz

### Speicherschutz

Einlegen von Batterien zum Speicherschutz ist bei diesem Gerät nicht erforderlich. Ein System zur Ruhestromversorgung sorgt dafür, daß der Speicherinhalt auch bei Stromausfall oder etwaigem Abtrennen des Netzsteckers von der Steckdose aufrechterhalten wird. Das System lädt sich mit jedem Ein- und Ausschalten der Stromversorgung automatisch neu auf. Da der Speicherkraft des Gerätes nicht unbegrenzt ist, muß das Einund Ausschalten jeden Monat mehrere Male durchgeführt werden. Die Zeitspanne, über welche der Speicherinhalt nach dem Ausschalten geschützt ist, richtet sich auch nach den klimatischen Verhältnissen und der Wahl des Aufstellungsortes. Durchschnittlich werden die Speicherinhalte etwa einige Wochen lang nach dem letzten Ausschalten des Geräts bewahrt. Diese Zeitspanne verkürzt sich etwas bei feuchtem Klima bzw. hoher Luftfeuchtigkeit.

### Vor der Inbetriebnahme dieses Geräts

### 1. Mitgeliefertes Zubehör


MW-Rahmenantenne × 1

T-főrmige UKW-Antenne × 1





Einlegen der Batterien in das Fernbedienungsteil (nur für den TX-902)

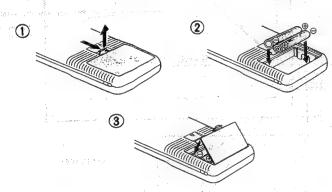

- ① Den Batteriefachdeckel an der Rückseite des Fernbedienungsteils in Pfeilrichtung schieben und nach oben abziehen.
- ② Die beiden mit dem Fernbedienungsteil mitgelieferten Batterien oder zwei Batterien der in der Tabelle angegebenen Sorte einlegen. Beim Einlegen auf richtige Polarität (Ausrichtung von Plus- und Minuspol) achten.
- 3 Den Batteriefachdeckel wieder aufsetzen.


### Anschlußdiagramm

Den Netzstecker einstecken, wenn alle Verbindungen richtig hergestellt sind.

### Allgemeine Hinweise

Vor der Ausführung irgendwelcher Systemanschlüsse zuerst das Gerät über den Netzschalter ausschalten. Ebenso darauf achten, den linken und rechten Kanal beim Anschließen nicht zu vertauschen.

Anschlüsse für CD-Player oder sonstige Komponenten (CD) Die Ausgangskabel des CD-Players oder eines zusätzlichen Audioelements an die CD-Buchsen anschließen. Fernsteuerbare Onkyo-CD-Player mit dem RI -Symbol können über den TX-902 betrieben werden. (Vergleiche Abschnitt "Anschlüsse für die Fernbedienung" auf Seite 21.) Weitere Einzelheiten entnehmen Sie bitte der Bedienungsanleitung Ihres CD-Players.

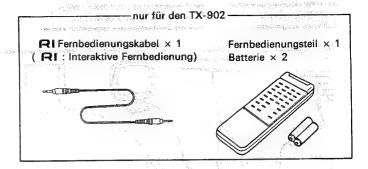

#### Batterien

- Das Fernbedienungsteil wird durch zwei Batterien mit Strom versorgt. Vor dem ersten Einsatz die beiden Batterien (mitgeliefert) wie in der Zeichnung dargestellt einlegen.
- Die durchschnittliche Lebensdauer der Batterien beträgt ein Jahr. Dieser Zeitraum kann länger oder kürzer sein, je nach Verwendungshäufigkeit und Umgebungsbedingungen (Temperatur und Luftfeuchtigkeit).
- Wenn das Fernbedienungsteil nicht arbeitet, obwohl die Regler an der Frontplatte des Tuners richtig arbeiten, sollten die Batterien ausgetauscht werden. Nur die in der folgenden Tabelle beschriebenen Batterien verwenden.

	A		
1	Тур	Spannung	Größe
	Mangan- batterien	1,5V	R6 (AA, Mignonzellen)

### HINWEISE:


- Verbrauchte Batterien niemals im Batteriefach belassen, da sie lack werden können und die austretende Säure das Fernbedienungsteil beschädigen kann.
- Beim Einlegen der Batterien immer die richtige Polarität (Ausrichtung von Pluspol (+) und Minuspol (-)) beachten.
- 3. Keine Nickel-Cadmium-Batterien (aufladbar) verwenden.
- Nicht eine Batterie des vorgeschriebenen Typs (Mangan) und eine Alkalibatterie zusammen verwenden.
- Immer beide Batterien zur gleichen Zeit austauschen; nicht atte und neue Batterien zusammen verwenden.

### Plattenspieleranschlüsse (PHONO)

Die Ausgangskabel des Plattenspielers an die PHONO-Buchsen anschließen. Dabei darauf achten, das Erdungskabel vom Plattenspieler an Masse (GND) (AntennenKlemme) anzuschließen. Unsachgemäße Erdung verursacht Leitungsbrummen. Bei Plattenspielern ohne GND-Kabel ist dieser Anschluß nicht nötig.


- Den Plattenspieler auf eine feste Unterlage stellen, wo er keinen Erschütterungen (insbesondere Vibrationen von den Lautsprecherboxen) ausgesetzt ist. Die Einwirkung solcher Vibrationen mindert nicht nur die Leistung des Plattenspielers, sondern verursacht auch eine Verzerrung der Baßfrequenzen und ruft möglicherweise ein Heulen der Lautsprecher hervor.
- 2. Weitere Vorsichtsmaßregeln in der Bedienungsanleitung des Plattenspielers bitte ebenfalls beachten.
- Beim Anschließen und Trennen der Plattenspieleranschlußkabel, Austauschen des Tonabnehmersystems oder Senken des Tonarms auftretende, laute Störgeräusche können zu einer Beschädigung der Lautsprecher führen. Vor dem Anschließen deshalb stets das Gerät über den Netzschalter ausschalten.



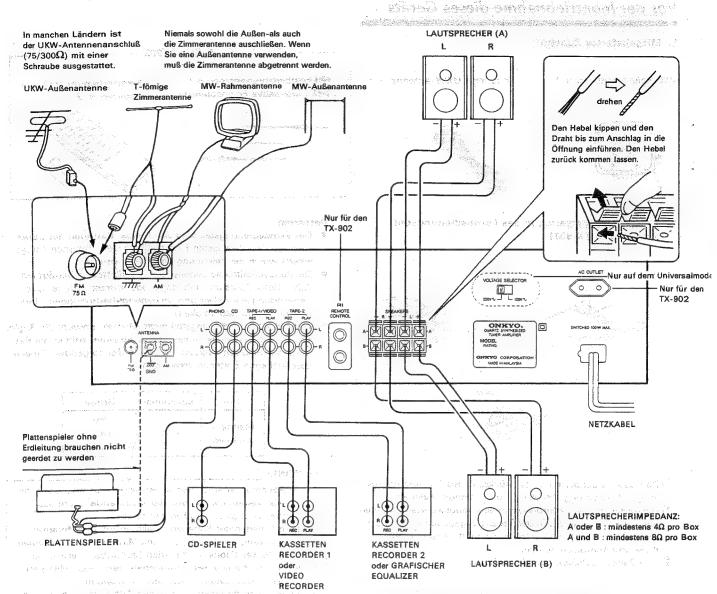

# Anschluß von Kassettendeck und Graphic Equalizer (TAPE-1 TAPE-2)

- Dieses Gerät hat zwei Anschlußmöglichkeiten für Kassettendecks. Wenn zwei Kassettendecks vorhanden sind, das eine an die Buchsen TAPE-1/VIDEO und das andere an die Buchsen TAPE-2 anschließen.
- Das Ausgangskabel an die TAPE-1/VIDEO und TAPE-2 "PLAY"-Buchsen, und das Eingangskabel an die TAPE-1/VIDEO und TAPE-2 "REC"-Buchsen. N\u00e4heres entnehmen Sie bitte den Bedienungsanleitungen der Kassettendecks.
- Um zusätzlich einen Graphic Equalizer anzuschließen, diesen mit den TAPE-2 Buchsen verbinden und das zweite Deck an die TAPE-Buchsen des Graphic Equalizer anschließen. (Siehe Abbildung rechts)
- Für Audiosignale von Bildplattenspielern, Videorecordern etc. diese an die Büchsen TAPE-1/VIDEO "PLAY", "REC" anschließen. Einzelheiten sind aus den Bedienungsanleitungen der betreffenden Videogeräten ersichtlich.
- Handelt es sich bei dem Onkyo-Kassettendeck um ein Modell mit Fernbedienungsanschlußbuchse, ist dieses an die Buchsen TAPE-1/VIDEO anzuschließen. Für den Anschluß des Fernbedienungskabels siehe Abschnitt "Anschlüsse für die Fernbedienung" (auf Seite 21). (nur für den TX-902)

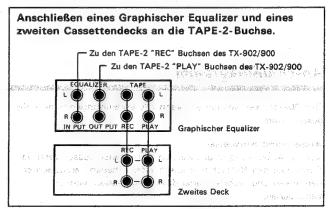


### UKW-Antennenanschluß


Die T-Antennen verwenden, wenn Sie in einem Gebiet wohnen, wo starke UKW-Signale vorhanden sind. Die Antenne an die Buchsen FM 75 Ohm anschließen und die Antenne an einer Wand oder einer anderen Fläche in einer Stellung anbringen, in der guter Empfang erzielt wird. Wenn in Ihrem Wohngebiet die UKW-Signale schwach sind, eine Multielement-Außenantenne verwenden. Lassen Sie sich vom Onkyo-Fachhändler über den besten Antennentypfür Ihr Wohngebiet beraten.

#### HINWEISE:

- Nicht gleichzeitig die T-f\u00f6rmige Innenantenne und eine UKW- Au\u00dBenantenne anschlie\u00e4en. Wenn eine Au\u00dBenantenne angeschlossen werden soll, die T-f\u00f6rmige Innenantenne klemmen.
- Für UKW- und Fersehempfang nicht dieselbe Antenne verwenden, da sonst Interferenzprobleme auftreten können.
   Sollten Sie auf eine gemeinsame UKW/TV Antenne angewiesen sein, einen geeigneten Verteiler (Fachhandel) verwenden.

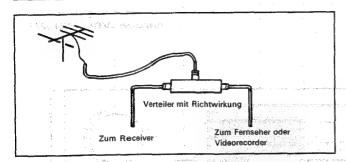

### MW-Antennenanschluß

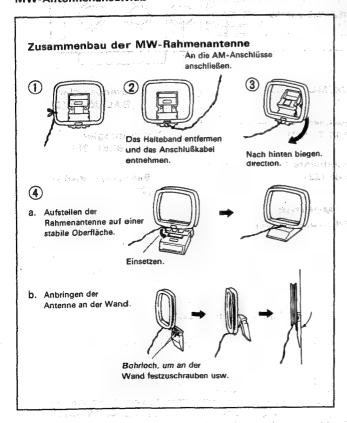

Eine MW-Schleifenantenne ist mitgeliefert. Das Anschlußkabel aus der Verpackung entnehmen und an die MW- Antennenklemmen anschließen. Diese Schleifenantenne kann oben auf dem Gerät aufgestellt werden oder an einer Wand oder anderen Fläche angebracht werden. Beim Anbringen verschiedene Positionen ausprobieren, um besten Empfang zu erzielen. Darauf achten, die Antenne nicht in der Nähe von Lautsprechern, Stromkabeln, Fernsehern, Videorecordern oder Elektromotoren zu plazieren. Bei Verwendung einer externen MW-Antenne nicht die Schleifenantenne abtrennen; beide Antennen an die Antennenklemmen anschließen.

#### HINWEIS:

Da der MW-Empfang durch Fernseher und Videorecorder beinträchtigt werden kann, diese Geräte vom Empfangsteil entfernt aufstellen.

### Lautsprecheranschlüsse (SPEAKERS)

- 1. Die Boxen an die Klemmen A und/oder B anschließen.
- Beim Anschließen der Lautsprecherboxen ist auf richtige Polung zu achten: Den roten Pluspol (+) des Verstärkers mit dem Pluspol (+) des Lautsprechers verbinden; ebenso den schwarzen Minuspol (-) des Verstärkers mit Minus (-) des Lautsprechers.
- Niemals eine Box sowohl an den rechten als auch an den linken Kanal anschließen.
- Lautsprecherkabel mit möglichst geringer Impedanz verwenden und kurz halten.
- Lautsprecherkabel sorgfältig anschließen, damit keine Kurzschlüsse auftreten können.

#### Wechselstromsteckdosen

GESCHALTET: (Nur für den TX-902)
 Eine Wechselstromsteckdose Steckdose wird durch den
 Netzschalter an der Fronttafel und dem Fernbedienungsteil einund ausgeschaltet. Die Kapazität beträgt 100 W. (Gilt nicht für Modelle für Großbritannien.)

Modell für Australian (Nur für den TX-902)






### Bedienungselemente und Bezeichnungen

HINWEIS:


 Funktionen, technische Daten und Display des TX-902 sind gegenüber dem TX-900 etwas unterschiedlich. Bitte lesen Sie zur korrekten Bedienung des entsprechenden Modells diese Anleitung aufmerksam durch.

Fronttafel

Weitere Einzelheiten über Tasten und Regler erfahren Sie bitte auf der zwischen [ ] angegebenen Seite.

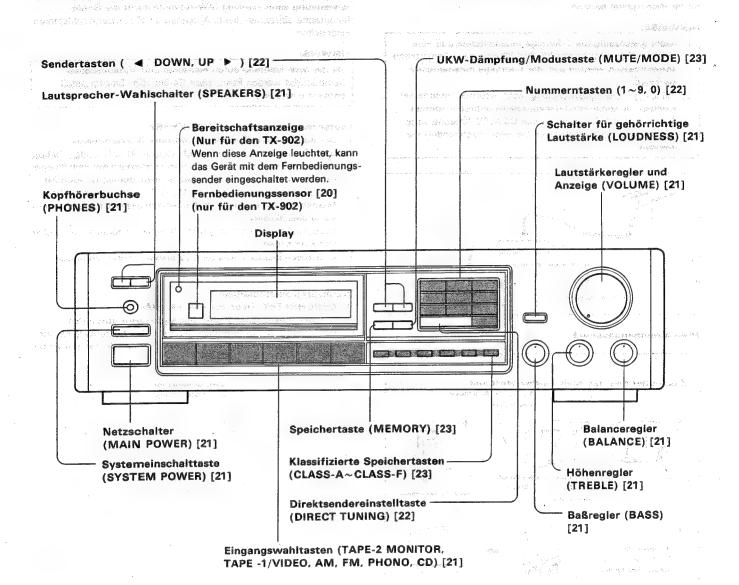


### Display

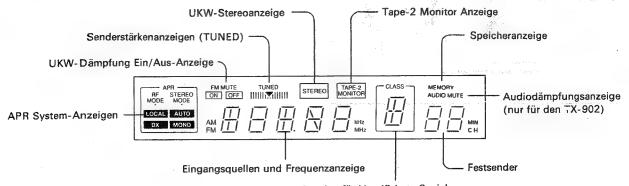


Service of the Service Service

### Fernbedienungsteils (nur für den TX-902)

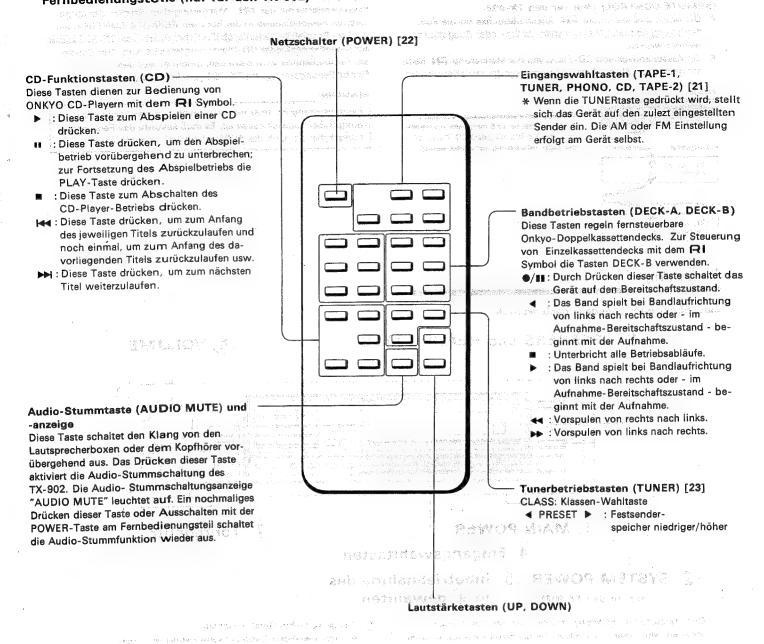

### Verwendung des Fernbedienungsteils

- Wenn das Fernbedienungsteil längere Zeit über nicht verwendet werden soll, die Batterien herausnehmen.
- Die Batterien des Fernbedienungsteils müssen regelmäßig ausgetauscht werden.
- Dieses Gerät sendet Infrarotstrahlen aus. Darum kann es sein, daß Befehle nicht richtig empfangen werden, wenn helles Licht auf die Frontplatte auftrifft. Um das zu vermeiden, das Gerät so aufstellen, daß helles Licht nicht direkt auftritt.
- Wenn das Gerät in einem Audiorack hinter einer Glastür aufgestellt wird, so darf diese Glastür nicht aus getöntem Glas bestehen oder verziert sein, da sonst der Signalempfang gestört oder verhindert wird.
- Durch Verwendung von anderen mit Infrarotstrahlen arbeitenden Geräten im gleichen Raum können Störungen bewirkt werden.
- 6. Der Sender des Fernbedienungsteils arbeitet bis zu einem Abstand von ca. 5m. Das Sendefenster muß immer auf das Empfangsfenster gerichtet sein, wenn ein Befehl zum TX-902 übertragen wird.
- Wenn dieses Fernbedienungsteil nicht richtig arbeitet, zuerst prüfen ob die Batterien stark genug sind. Wenn das Problem auch bei frischen Batterien besteht, den Onkyo-Kundendienst benachrichtigen.

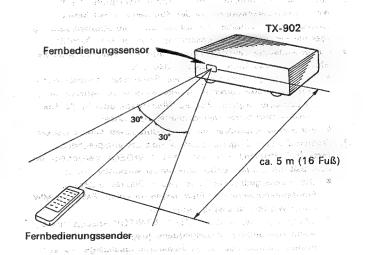



# Anschlüsse für die Fernbedienung (REMOTE CONTROL) (Nur für den TX-902)

- Die obere und die untere RI Anschlußbuchse für die Fernbedienung können gleichermaßen als Ein- oder Ausgang verwendet werden.
- Ein Kassettendeck und CD-Player mit der Markierung RI Kann mit dem mitgelieferten Fernbedienungssender betrieben werden.

TX-902

RIT REMOTE CONTROL

CD-PLAYER

RI REMOTE CONTROL

KASSETTENDECK

RI REMOTE CONTROL

ONTROL

ON

Ein RI Fernbedienungskabel mit einem Miniphonostecker (3,5 mm) kann zur Verbindung des TX-902 mit jedem CD-Player mit der RI -Markierung verwendet werden.


Zur Verwendung eines Onkyo CD-Players oder eines Kassettendecks mit der [7] -Markierung den Stecker der mitgelieferten Fernbedienung in die Buchsen REMOTE CONTROL einstecken. Es spielt keine Rolle, ob das Kabel zuerst vom TX-902 zuerst am Kassettendeck oder CD-Player eingesteckt wird. Der Sender der Fernbedienung wird betrieben, indem er auf den Fernbedienungssensor am TX-902 gerichtet wird.

#### HINWEIS:

Fernbedienung ist nicht möglich, wenn nur das Fernbedienungskabel angeschlossen ist. Es muß sowohl das Fernbedienungskabel als auch das Stiftsteckerkabel angeschlossen sein.

### Bedienung

Zum Hören einer Tonquelle nach Wunsch

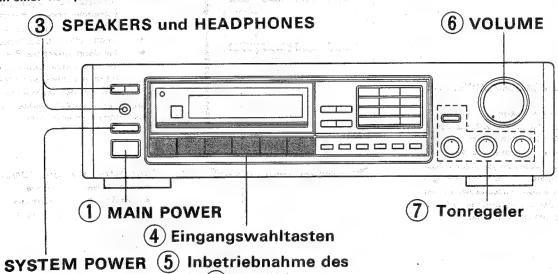

in(4) gewählten

① Den Netzschalter (POWER) drücken, um das Gerät einzuschalten. Mit dieser Taste setzen Sie die Stromversorgung unter Spannung.

(nür für den TX-902)

- Q Auf diese Taste drücken, um die Stromversorgung und die Wechselstromsteckdosen auf der Rückseite in den Bereitschaftsmode zu schalten. Sie können auch die Stromversorgung über die Fernbedienung einschalten (nur für den TX-902).
- Das gewünschte Lautsprecherpaar durch entschprechende Betätigung der Lautsprechertasten einschalten.
  - An diesen Receiver k\u00f6nnen zwei Boxenpaare angeschlossen und wahlweise getrennt (A oder B) oder gemeinsam (A + B) betrieben werden. F\u00fcr die Wiedergabe \u00fcber beide Boxenpaare sind beide Tastenschalter einzurasten.
  - Für Stereo-Kopfhörer mit standardmäßigem Klinkenstecker.
- Wählen Sie eine Eingangsquelle mittels der entsprechenden Taste (CD, PHONO, FM, AM, TAPE-1/VIDEO). Versichern Sie sich, daß die Geräte richtig miteinander verbunden sind.
  - Die jeweils gedrückte Taste wird in Display angezeigt.
     Empfangsbereiche und Frequenzen für UKW (FM) und MW (AM) werden im Display angezeigt.
  - Überprüfen Sie, ob die TAPE-2 MONITOR Anzeige aus ist, wenn eine andere Eingangsquelle ausgewählt wird Überprüfen Sie auch, ob die Audiodämpfungsanzeige aus ist. (Nur für den TX-902)

- (5) Das gewünschte Gerät einschalten.
  - Den jeweiligen Gebrauchsanweisungen folgen.
  - Bei der Wahl von AM und FM die Erläuterungen unter "Radioempfang" lesen.
- 6 Den Lautstärkeregler nach Wunsch einstellen.
  - Im Uhrzeigersinn drehen, um die Lautstärke zu erh\u00f6hen.
     Die Lautst\u00e4rke kann manuell eingestellt werden, und durch die Lautst\u00e4rketasten (UP/DOWN) des Fernbedienungsteils. (nur f\u00fcr den TX-902)
- 7 Die Tonregelknöpfe für den gewünschten Klang einstellen.
  - Baßregler (BASS)

    Mit diesem Regler können die Bässe betont oder abgeschwächt werden.
  - Höhenregler (TREBLE)
    Mit diesem Regler können die Höhen betont oder abgeschwächt werden.
  - Balanceregier (BALANCE)
     Mit diesem Regier wird die relative Lautstärke der linken und rechten Lautsprechersysteme eingestellt.
  - Schalter für gehörrichtige Lautstärke (LOUDNESS)
    Beim Hören mit niedriger Lautstärke diese Taste drücken,
    um die sehr hohen und sehr niedrigen Frequenzen anzuheben. Dadurch entsteht ein natürlicher wirkendes Klangbild.



### Direktfunktion

HINWEIS:

Diese Funktion ist betriebsbereit, wenn ein Onkyo-Kassettendeck oder CD-Player mit dem RI Symbol mit einem RI Fernbedienungskabel an den TX-902 angeschlossen wird.

o graning religion, expense should the residence with a stable to the

Der TX-902 schaltet einfach durch direkte Bedienung des gewünschten Komponenten (CD-Player oder Cassettendeck) automatisch auf dieses Gerät um. Das zuvor betriebene Gerät schaltet sich aus, und das gewünschte Gerät startet den Betrieb. Beim Wechseln auf andere Programmquellen ist ein Umschalten über die Eingangswahltaste des TX-902 deshalb nicht notwendig.

Beispiel

Durch Drücken der Wiedergabetaste des CD-Players schaltet die Eingangswahltaste des TX-902 automatisch auf "CD". War zuvor das Kassettendeck eingeschaltet, stoppt die Bandwiedergabe, und der CD-Player beginnt automatisch das Abspielen einer CD.


HINWEIS:

Die Direktfunktion arbeitet nicht bei Plattenspielerbetrieb.

**Tuner-Empfang** 

Die AM oder FM Taste drücken, und sicherstellen, daß die TAPE-2 MONITOR-Anzeige und die Audiodämpfung aus sind.

Sendereinstellung mit den TUNING-Tasten

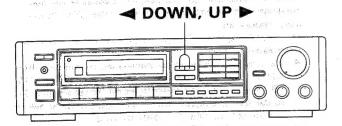

Zum Einstellen von nicht gespeicherten UKW-Sendern die Sendertaste UP oder DOWN drücken. Wenn UP gedrückt wird, erhüht sich die Frequenz, wenn DOWN gedrückt wird senkt sie sich. Die Frequenz wird in 50kHz (oder 200kHz) Schritten bei UKW und in 9kHz (oder 10kHz) Schritten bei MW gehändert, wenn die Sendertaste wiederholt kurz gedrückt wird. Wenn die Taste kontinuierlich länger als 0,5 s gedrückt gehalten wird, wird automatische Sendersuche eingeschaltet, und das Frequenzband wird automatisch abgesucht. Wenn ein Sender empfangen wird, hürt der Suchlauf auf und die eingestellte Frequenz wird angezeigt. Zum Aufsuchen des nächsten Senders die Taste erneut drücken.

Die Senderanzeigen IIIII leuchten auf, wenn der Sender richtig eingestellt ist. Sie leuchten nicht bei schwachen Sendern auf. Die roten Anzeigen " blinken während des Suchlaufs. Zum Empfang von schwachen UKW-Sendern die MUTE/MODE Taste auf Aus stellen und die Frequenz des gewünschten Senders manuell einstellen.

weeks to say and the fresh

the commentation will always to the wife for the party in the

वेत्रम कुला र सार्वकार्यकाल जाता है। वस विकास के तार विकास कर है।

and the control of the second substitution of the second s

ograficum (colorida o francosca americano) ma exect. Fin Executamentes silves com accesso absorbasidada francosca


Burgaran gartinaa ka shiriyayaya, Bara Aydangaya ya ilka Barangayaya

the tracepart has an endinger person regression and

HOUSE WARREST WARREN WARREN

Empfangen von Sendern mit direkter Eingabe der Sendefrequenz (Direktwahl)

Wenn die Sendefrequenz des gewünschten Senders bekannt ist, kann diese direkt eingegeben werden.

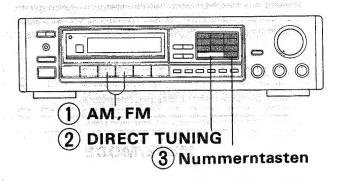

- ① Die Eingangswahltaste AM oder FM drücken.
- 2 Die Taste DIRECT TUNING drücken.
  - "--" oder "-" blinkt 16 Sekunden lang im Frequenzdisplay.
- 3 Die gewünschte Frequenznummer mit den Zifferntasten eingeben, während die Eingabezeichen blinken. Wenn z.B. eine Sendefrequenz von 88,10 MHz eingegeben werden soll, die Zifferntasten 8, 8, 1 und 0 drücken.
  - In Gebieten mit einem MW-Frequenzraster von 10 kHz wird bei Eingabe der Zehnerstelle die Null automatisch hinzugefügt.
  - Wenn die in diesem Eingabeverfahren gewünschte Frequenz nicht existiert, wird die jeweils nächste höher oder niedriger liegende Frequenz empfangen. Wenn die eingegebene Frequenz nicht im Empfangsbereich ist, blinkt die Frequenz zwei Sekunden lang, und danach schaltet das Display auf die vorherige Frequenz zurück.
  - Wenn eine falsche Frequenz eingegeben worden ist, die Taste DIRECT TUNING drücken und neu beginnen.

— Automatisches Präzision-Empfangssystem (bei UKW) — Das APR-System ist ein von Onkyo entwickeltes Computer-Steuerungssystem. Es stellt automatisch die HF-Verstärkung (fern/nah) und die Stereo/Mono-Empfangsart richtig für den momentan empfangenen Radiosender ein. Die Anzeige ändert sich immer, wenn die APR-Schaltung zwischen LOCAL/DX oder AUTO/MONO umschaltet und zeigt die momentane APR-Einstellung an. (Das APR- System arbeitet nur bei UKW.)

### HINWEIS:

- Bei Stellung der FM MODE Taste in eine andere Stellung als AUTO arbeitet die APR-Funktion nicht, und die STEREO MODE-Anzeige schaltet auf "MONO" um.
- Bei UKW-Mono-Empfang leuchtet die Anzeige "MONO"

计算法定点的的 子病病

 In der Betriebsart RF MODE erscheint bei starken einfallenden Sendern die Anzeige LOCAL.

ing regard to write the company operation of the

Se standard and an expensal that have

thereton with the transfer and the control of the c

there are Q2 and a commentation that make it with the content of a

grand, after 1996 - Andrews I washings the solid manifest of facilities and the solid manifest of the solid ma

grantes and the second washing and compared the second community of the second and the second community of the second communit



Benutzung der FM MUTE/MODE Taste


UKW in Stellung Muting Ein (STEREO), ist UKW-Stereoempfang müglich, und die Stummschaltung unterdrückt

Zwischensenderrauschen und schwache UKW-Sender. In

Stellung Aus (MONO) wird Zwischensenderrauschen gehürt,

und auch schwache UKW-Sender önnen empfangen werden.

(Die Umschaltfunktion Stumm/Stereo ist nur bei UKW wirksam.)

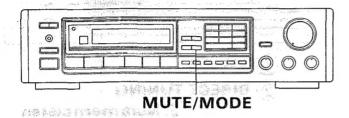

 Die Stereo-Anzeige leuchtet, sobald eine Sendung in Stereo empfangen wird. Die Stereoanzeige leuchtet nicht, wenn ein Sender mono oder zu schwäch ist.

#### Funktion des klassifizierten Speichers


Der Speicherraum für die Sendervorwahlen kann nach Programmarten oder für verschiedene Personen unterteilt werden.

### HINWEIS:

Im Speicher können noch Frequenzen vom letzten Werkstest vor dem Versandt vorhanden sein. Wenn das bei Ihrem TX-902/900 der Fall ist, diese unnötigen Frequenzen entsprechend den Anweisungen unter "Löschen von Festsendern" löschen und die gewünschten Frequenzen eingeben.

### Speichern der Sender

Mit diesem Gerät können Sie insgesamt 30 Sender unter CLASS A bis CLASS F speichern. Der gleiche Sender kann in verschiedenen Kategorien gespeichert werden, aber die Speichernummer des Senders hängt von der Reihenfolge der Eingabe in den jeweiligen Klassen ab.

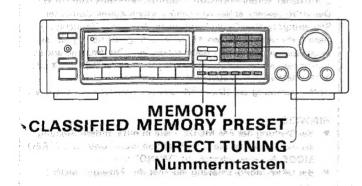

1 Den gewünschten Sender einstellen (siehe "Senderempfang").

later of About the American British of the course

- Drücken Sie die MEMORY-Taste.
- Die MEMORY-Anzeige blinkt 8 sekunden lang.


anzuzeigen, daß keine Speicherplätze mehr frei sind.

- 3 Drücken Sie eine der Kategorie-Tasten (CLASS A CLASS F).
- Der Sender ist jetzt in der gewählten Kategorie unter der jeweils niedrigsten noch freien Speichernummer registriert.
   Durch Wiederholen des obigen Vorgangs können bis zu 30 Sender eingegeben werden. Wenn versucht wird, einen 31. Sender zu speichern, erscheint "FULL" im Eingangs/Frequenz-Display, um

Löschen von gespeicherten Sendern

Die zu löschende Kategorienummer abrufen (siehe "Abrufen von gespeicherten Sendern"), und dann die Taste MUTE/MODE drücken, während die MEMORY-Taste gedrückt gehalten wird. Ein neuer Sender kann jetzt unter der frei gewordenen Speichernummer eingegeben werden.

ografika ista kortat

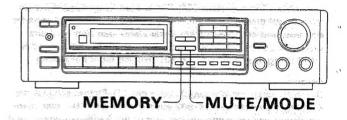

Abrufen von gespeicherten Sendern

- ① Die klassifizierte Speichertaste für die gewünschte Kategorie drücken. Bei Betrieb mit Fernbedienung wird die neben der momentan eingestellten liegende Kategorie abgerufen, wenn die Taste CLASS gedrückt wird. (Nur für den TX-902)
  - Die Speichernummer (Sendernummer), die eingestellt war, bevor die Kategorie abgerufen wurde, wird empfangen.
- ② Nach dem obigen Schritt kann man nach Wunsch auf mehrere Weisen fortfahren.
  - Durch erneutes Drücken der gleichen klassifizierten Speichertaste wird die nächste Speichernummer (Sendernummer) empfangen.
  - Die Speichernummer, die empfangen werden soll, mit den Ziffertasten eingeben.
    - Wenn die Speichernummer 2stellig ist, die beiden Ziffern schnell nacheinander eingeben. Bei der Eingabe von "15"
       z.B. wird "15" nicht registriert, wenn länger als eine Sekunde vor der Eingabe von "5" gezögert wird, so daß in diesem Fall nur eine "1" registriert wird.
    - Wenn eine Zahl außerhalb des Bereichs von 1 bis 30 eingegeben wird, oder eine Nummer, die nicht gespeichert ist, blinkt die Nummer 2 Sekunden lang, und dann erscheint die vorher angezeigte Nummer erneut.
    - Wenn eine Nummer zwischen 1 und 3 gedrückt wird, werden Display und Sender 1 Sekunde später umgestellt.
- c. Wenn die Taste PRESET man Fernbedienungsteil gedrückt wird, wird die momentan eingestellte Kategorienummer gesteigert oder gesenkt. Wenn die Taste gedrückt gehalten wird, wird der Wert kontinuierlich gesteigert oder gesenkt. Wenn die höchste oder niedrigste Zahl erreicht ist, wird die nächste Kategorie oder die vorherige eingestellt.

### Bandaufnahmen and resurve

- Alle im Anschlußdiagram dargestellten Anschlüsse zwischen dem Verstärker und dem Deck durchführen.
- ② Rundfunkprogramm Mit der UKW oder MW men der Schalten S

Schallplatte: Mit der PHONO-Programmquellentaste auf Schallplatten-Wiedergabe schalten.

CD: Mit der CD-Programmquellentaste auf CD-Wiedergabe schalten.

- (3) Das Cassettendeck auf Aufnahme stellen. Die Aufnahme kann über die Lautsprecher oder Kopfhörer nach Wunsch mitgehört werden. Für TAPE-2 die entsprechende Bandmonitortaste einschalten, um das Signal zu hören, das nach der Aufzeichnung auf Band vom Cassettenband auf dem TX-902/900 wiedergegeben wird. (Hinterbandkontrolle ist nur bei Cassettendecks mit drei Tonköpfen möglich.)
- (4) Den richtigen Aufnahmepegel mit den Reglern am Cassettendeck einstellen. Bei Aufnahme- und Überspielbetrieb niemals die Stellung der Klangregler (Bässe, Höhen etc.) an diesem Gerät verändern.



### Band-zu-Band Überspielen

- 1) Die beiden Cassettendecks wie im Anschlußdiagramm gezeigt mit diesem Gerät verbinden.
- ② Das Wiedergabeband in Deck 1 und das Aufnahmeband in Deck 2 einlegen.
- (3) Die Monitortaste TAPE-1 drücken.
- (4) Das Cassettendeck 1 auf Wiedergabe und das Cassettendeck 2 auf Aufnahme schalten.
- (5) Das Quellensignal kann über die Lautsprecher oder über Kopfhörer gehört werden, wenn die Taste TAPE-2 MONITOR in Stellung OFF, also ausgeschaltet ist. Wenn Deck 2 drei Tonköpfe hat, ist Hinterbandkontrolle möglich (wenn die Taste TAPE-2 MONITOR in Stellung ON ist). Weitere Einzelheiten sind aus der Bediernungsanleitung des Decks ersichtlich.

Betriebsprobleme und deren Behebung

Die Regler an der Frontplatte arbeiten,

aber nicht die des Fernbedienungsteils.

(nur für den TX-902)

#### Graphic Equalizer

- 1 Den Graphic Equalizer an die TAPE-2 Buchsen an der Rückseite anschließen.
- (2) Wenn ein zweites Cassettendeck verwendet wird, an die TAPE-Buchsen des Graphic Equalizer anschließen.
- (3) Den Monitorschalter TAPE-2 drücken.
- (4) Die Hinweise der Bedienungsanleitung des Graphic Equalizers beachten.
- (5) Um das bearbeitete Signal aufzunehmen, das zweite (an den Graphic Equalizer angeschlossene) Cassettendeck verwenden.

### HINWEIS: (nur für den TX-902)

Wenn Betriebsstörungen auftreten, das Gerät mit den Reglern an der Frontplatte bedienen, um sicherzustellen, daß das Problem nicht am Fernbedienungsteil (oder an nachlassender Batterieleistung des Fernbedienungsteils) liegt.

• Die Batterien austauschen.

#### **Abhilfe** Ursache Störung Stecker in die Steckdose stecken. Netzkabel nicht angeschlossen. Kein Strom. Wenden Sie sich an einen Onkyo-Fachhändler. Netzsicherung durchgebrannt. Tonband-Monitorschalter ausschalten. Tonband-Monitorschalter eingeschaltet. Strom vorhanden, aber kein Ton. Drücken Sie die entsprechende Taste der Fern- Stummschaltung aktiviert. (nur für den bedienung. TX-902) Die Eingangskabel, Boxenkabel, Stiftstecker etc. Schlechte Steckverbindungen. überprüfen. Wenden Sie sich an einen Onkyo-Fachhändler. Lautsprecher-Schutzsicherung durchgebrannt (Kurzschluß an den Lautsprecheranschlüssen). Äußeren Leiter (Abschirmung) der Eingangs- Schlechte oder keine Eingangserdung. Brummen, niederfrequente Störgestecker überprüfen. Schlechte oder keine Erdung der räusche. Auf richtige Erdung überprüfen. Phono-Eingänge (Plattenspieler-motor) Den Abstand zwischen den genannten Geräten Plattenspieler und Lautsprecherboxen Heulen beim Aufdrehen der Lautstärke. vergrößen. stehen zu nahe beisammen. · Erneuern. Rauher oder kratzender Ton. Unsaubere Abtastnadel des Plattenspielers abgenutzt. Höhen. · Reinigen. Abtastnadel verschmutzt. Den Höhenregler schwächer einstellen. Der Höhenregler ist zu stark eingestellt. Die mitgelieferte MW-Schleifenantenne an den • Die MW-Schleifenantenne ist nicht MW-Sender können nicht empfangen Antennenbuchsen AM anschließen. angeschlossen. Das Gerät woanders aufstellen. Brummgeräusch bei MW-Empfang (be- Störungen von einem elektrischen Ge- MW-Außenantenne verwenden. rät (z.B. Leuchtstoffröhre). sonders nachts bei schwachen Sendern). • Die MW-Schleifenantenne so weit entfernt wie Einstreuung von einem Fernsehgerät. Hochfrequentes Störgeräusch oder summöglich vom Fernseher aufstellen. men bei MW-Empfang. Den Receiver in größerem Abstand vom Fernsehgerät aufstellen. Die Antenne so weit wie möglich von Krachen bei MW-und UKW-Empfang. Einstreuung durch Ein/Ausschalten Leuchtstofflampen aufstellen. von Leuchtstoffröhren. Die UKW-Außenantenne so weit von der Straße Einstreuung durch Autozündung. wie möglich anbringen. Die Position oder Richtung der Außenantenne verändern. Auf T-förmige Antenne umstellen..... Sender ist zu stark. UKW-Signalstärkenanzeigen und Antenne mit besserer Richtwirkung verwenden UKW-Wellen werden von Bergen oder Stereoanzeigen leuchten auf, aber der und Ort wählen, wo die Verzerrung am geringsten Gebäuden reflektiert. Klang ist verzerrt und die Kanaltrennung schlecht. Verwenden Sie eine Außenantenne. UKW-Signalstärkenanzeigen und Sender ist zu schwach. Die Ausrichtung der Außenantenne ändern. UKW-Stereosendungen haben etwa nur Stereoanzeigen blinken, und auf UKW tritt die Hälfte der Ausstrahlungsreichweite Rauschen auf. von Monosendungen. Stromversorgug über längere Zeit nicht • Die Speicherinhalte gehen verloren, wenn der Kein Vorwahlsender möglich bei Eingabe Netzschalter nicht mindestens einige Male pro eingeschaltet. der Vorwahlnummer. Monat eingeschaltet wird. In diesem Fall müssen alle Sendervorwahlen erneut eingegeben werden. Batterien einlegen. Keine Batterien im Fernbedienungsteil.

Die Rasterschritte, um die die Empfangsfrequenz bei der Senderabstimmung zu-bzw. abnimmt, werden schon werksseitig auf das Frequenzraster des Bestimmungslandes eingestellt. Falls Sie diesen Receiver in einem Land mit abweichendem Frequenzraster verwenden und die Rundfunkstationen nicht genau einstellen können, wenden Sie sich bitte an den Kundendienst.

Die Batterieleistung ist zu schwach ge-

worden.

### Technische Daten

Verstärker		TX-900
Jennleistung: াজন্ম প্রকাশন কর্মান একটা সংগ্র	50 Watt (effektiv) pro Kanal an 8 Ohm, beide Kanäle ausgesteuert 40 Hz bis 20 kHz, 0,2% Klirrfaktor	40 Watt (effektiv) pro Kanal an 8 Ohm, beide Kanäle ausgesteuert, 40 Hz bis 20 kHz, 0,3% Klirrfaktor
Ausikleistung	2 × 120 Watt an 4 Ohm, 1 kHz (DIN) 2 × 80 Watt an 8 Ohm, 1 kHz (DIN)	2 × 95 Watt an 4 Ohm, 1 kHz (DIN) 2 × 68 Watt an 8 Ohm, 1 kHz (DIN)
inusleistung	2 × 65 Watt an 4 Ohm, 1 kHz (DIN) 2 × 55 Watt an 8 Ohm, 1 kHz (DIN)	2 × 55 Watt an 4 Ohm, 1 kHz (DIN) 2 × 45 Watt an 8 Ohm, 1 kHz (DIN)
lirrfaktor:	0.2% bei Nennleistung	0,3% bei Nennleistung 0,1% bei 30 Watt
ntermodulation:	0.1% bei 30 Watt 0.2% bei Nennleistung	0,3% bei Nennleistung
Dämpfungsfaktor:	0,1% bei 30 Watt	
requenzgang:	20 - 30.000 Hz ± 1 dB 20 - 20.000 Hz ± 0.8 dB	20 - 30.000 Hz ± 1dB 20 - 20.000 Hz ± 0.8 dB
RIAA-Abweichung: Empfindlichkeit und Impedanz:	PHONO: 2,5 mV/50 kOhm	PHONO: 2,5 mV/50 kOhm
The state of the s	CD/TAPE PLAY: 150 mV/50 kOhm TAPE REC: 150mV/3,5 kOhm	CD/TAPE PLAY: 150 mV/50 kOhm TAPE REC: 150 mV/3,5 kOhm
Übersteuerungsfestigkeit des	120 mV (offertiv) boi 1 kHz 0 206 Klim	120 mV (effektiv) bei 1kHz, 0,3% Klirr
Phono-Eingangs: Fremdspannungsabstand:	120 mV (effektiv) bei 1 kHz, 0,2% Klirr PHONO: 80 dB (bei 5 mV Eingang,	PHONO: 80 dB (bei 5 mV Eingang,
and the second s	IHF-A) CD/TAPE:100 dB (IHF-A)	IHF-A) CD/TAPE:100 dB (IHF-A)
Klangregler:	Bässe: ±10 dB bei 100 Hz	Bässe: ±10 dB at 100 Hz
Dämpfung:	Höhen: ±10 dB bei 10 kHz	Höhen: ±10 dB at 10 kHz
Tuner	The state of the s	
UKW-Empfangsteil Empfangsbereich:	Ausf. für Europa: 87,5 – 108,0 MHz	Ausf. für Europa: 87,5 - 108,0 MHz
Emplangsbereich.	(50 kHz-Schrittraster)	(50 kHz-Schrittraster)
The state of the second	Ausf. für kanada: 87,9 - 107,9 Mkz (200 kHz-Schrittraster)	Ausf. für kanada: 87,9 – 107,9 Mkz (200 kHz-Schrittraster)
Nutzbare Eingangsempfindlichkeit:	Mono: 12,4 dBf, 1,2 μV, 75 Ohm	Mono: 12,4 dBf, 1,2 μV, 75 Ohm
and the second s	1,2 μV (26 dB S/N, 40 kHz Hub) DIN 75 Ohm	1,2 μV (26 dB S/N, 40 kHz Hub) DIN 75 Ohm
gara gaggani gi aga si sa at natir sa ta sa	Stereo: 19,2 dBf, 2,5 μV, 75 Ohm 25 μV (46 dB S/N, 40 kHz Hub)	Stereo: 19,2 dBf, 2,5 μV, 75 Ohm -25 μV (46 dB S/N, 40 kHz Hub)
the state of the s	DIN 75 Ohm	DIN 75 Ohm
Antenneneingangspegel für 50 dB S/N:	Mono: 18,2 dBf, 2,2 μV, 75 Ohm	Mono: 18,2 dBf, 2,2 μV, 75 Ohm
	Stereo: 38,2 dBf, 22 μV, 75 Ohm	Stereo: 38,2 dBf, 22 μV, 75 Ohm
Gleichwellenselektion: Spiegelfrequenzdämpfung:	1,5 dB 85 dB	61,5 dB
ZF-Unterdrükung:	90 dB Mono: 70 dB	90 dB Mono: 70 dB
Fremdspannungsabstand:	Stereo: 65 dB	Stereo: 1500, 400, 65 dB
Trennschärfe: AM-Unterdrückung:	50 dB DIN (±300 kHz, 40 kHz Hub) 50 dB	50 dB DIN (±300 kHz, 40 kHz Hub) 50 dB
Kirrfaktor:	Mono: 0,15%	Mono: 0,15%
Frequenzagna	Stereo: 0,3% 30 - 15.000 Hz ± 1,5 dB	Stereo: 0,3% 30 - 15,000 Hz ± 1,5 dB
Stereo-Kanaltrennung:	40 dB für 1 kHz	40 dB für 1 kH
MW-Empfangsteil	Aust für Furons: 522 – 1611 kHz	Ausf. für Europa: 522 – 1611 kHz
The second second	(9 kHz-Schrittraster)	(9 kHz-Schrittraster)
A gladuk ing mengangan dan Sala	Ausf. für kanada: 530 - 1710 kHz (10 kHz-Schrittraster)	Ausf. für kanada: 530 – 1710 kHz (10 kHz-Schrittraster)
Section of the Sectio	Modell für Saudi-Arabien und Allgemeines Modell: 531 – 1602 kHz (9 kHz-Schrittraster)	Modell für Saudi-Arabien und Allgemeines Modell: 531 – 1602 kHz (9 kHz-Schrittraster)
Nutzbare Eingangsempfindlichkeit:	30 µV	30 μV
Spiegelfrequenzdämpfung:	#40 dB 10 m 10 teges 10 test 1	. 40-dB (815), (625), (65), (67), (75), (7
Fremdspannungsabstand:	≈40 dB	. 40 dB grant was been also as a contract to account
Klirrfaktor: Allgemein	0,8%	0,8% Despective and the state of the state o
Aligemein Netzspannung und-frequenz:	Ausf. für Europa: 230 V, 50 Hz	Ausf: für Europa: 230 V, 50 Hz
	Ausf. für kanada: 120V, 60Hz  Ausf. für Großbritannien und Australien:	Ausf. für kanada: 120V, 60Hz Ausf. für Großbritannien und Australien:
The state of the s	240 V, 50 Hz	240 V, 50 Hz
the second of the second of the second	120/220V schaltbar, 50/60 Hz	Universalausführung: Wechselstrom 120/220V schaltbar, 50/60 Hz
Abmessungen (B $\times$ H $\times$ T): Gewicht:	455 × 120 × 316 mm	455 × 120 × 316 mm 7,0 kg.
Gewicht: Fernbedienungsteil RC-184S (nur für		
Sender: Reichweite:	Infrarot	Control to the control of the contro
Daiobisoitos	Etwa 5 m	and the second of the second o

Zwei R6-Batterien (AA, Mignozellen) (1,5 V × 2)

Etwa 5 m

Reichweite:

Betriebsstrom: